 
 


# Digital Piano

Operation Instruction

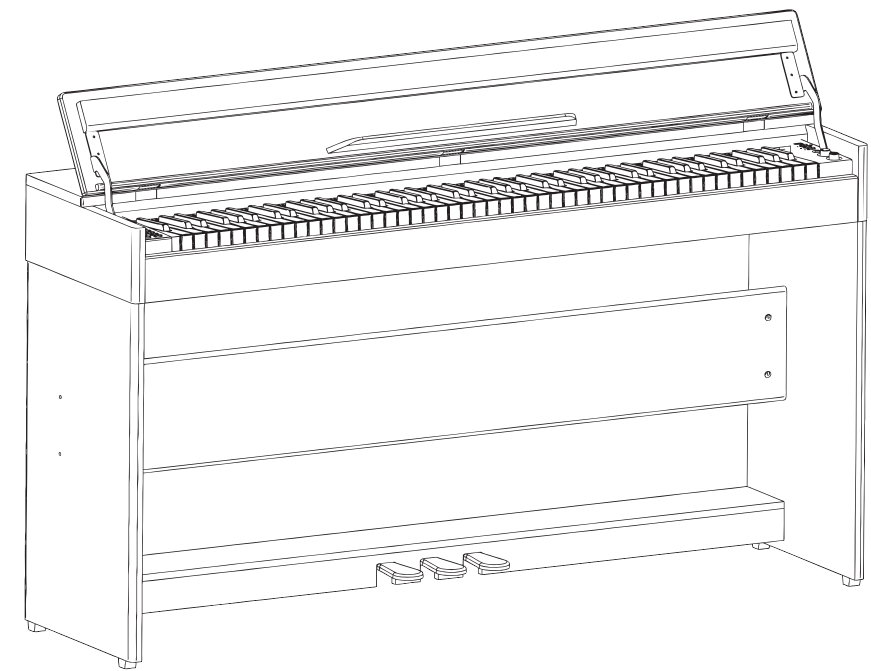 


## Mp3 Bluetooth Receiving Module Function Description

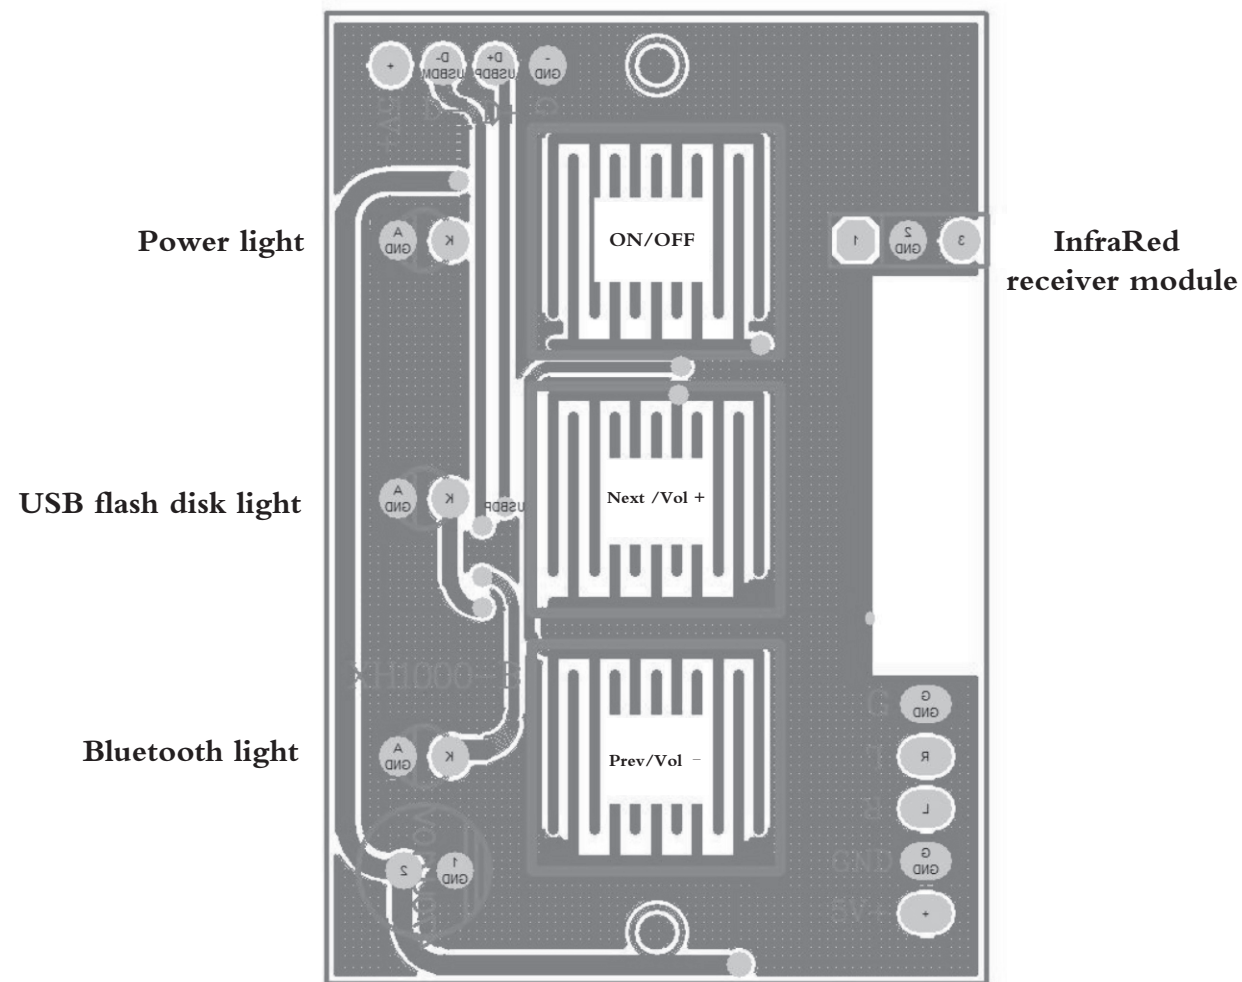 


### Function Description

1. USB flash drive is in running status after turning on the “POWER” switch.
2. Long press on (ON/OFF) key then enter into Bluetooth status (Bluetooth light flashes quickly). The light flashes slowly after connected
3. Press on ON/OFF to realize Play/Pause
4. Quick click on “Next” to switch the next song; Long press on “Vol+” to increase the volume
5. Quick click on “Prev” to switch the previous song; Long press on “Vol-” to reduce the volume
6. It can be operated by remote control
7. Name of Bluetooth : XH-PIANO

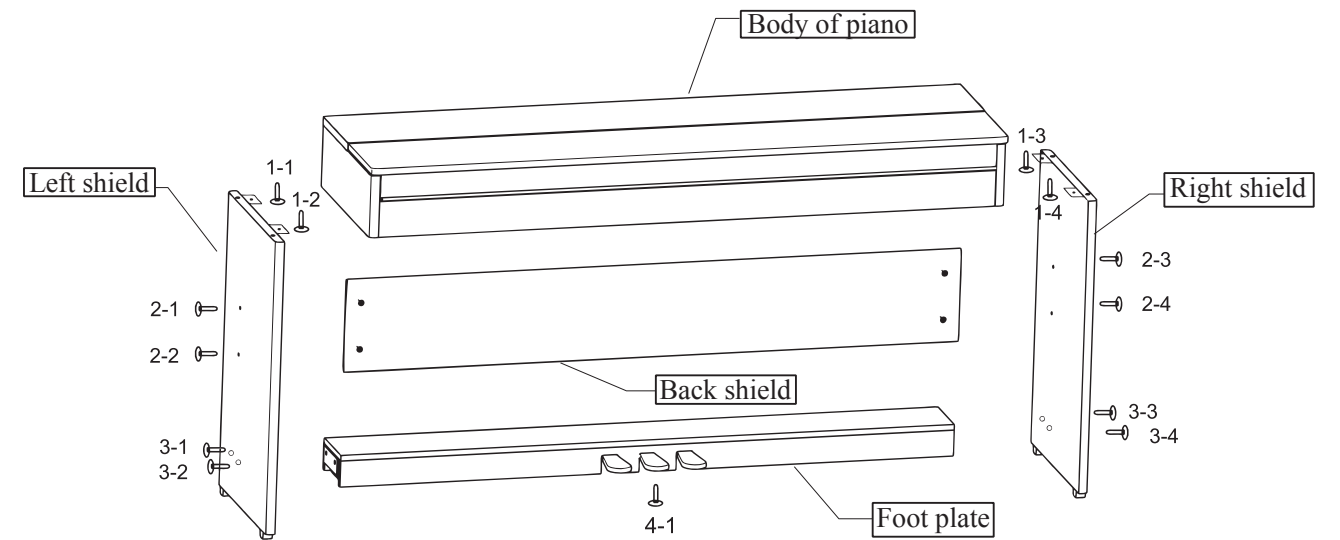 


- 1-1 to 1-4 Plastic handle screw M6\*25(4 grains)
- 2-1 to 2-4 Cross recessed raised countersunk head tapping screws M5\*60 (4 grains)
- 3-1 to 3-4 Cross recessed raised countersunk head furniture screws M6\*50 (4 grains)
- 4-1 Screw with plastic handle M6\*35 (1 grain)

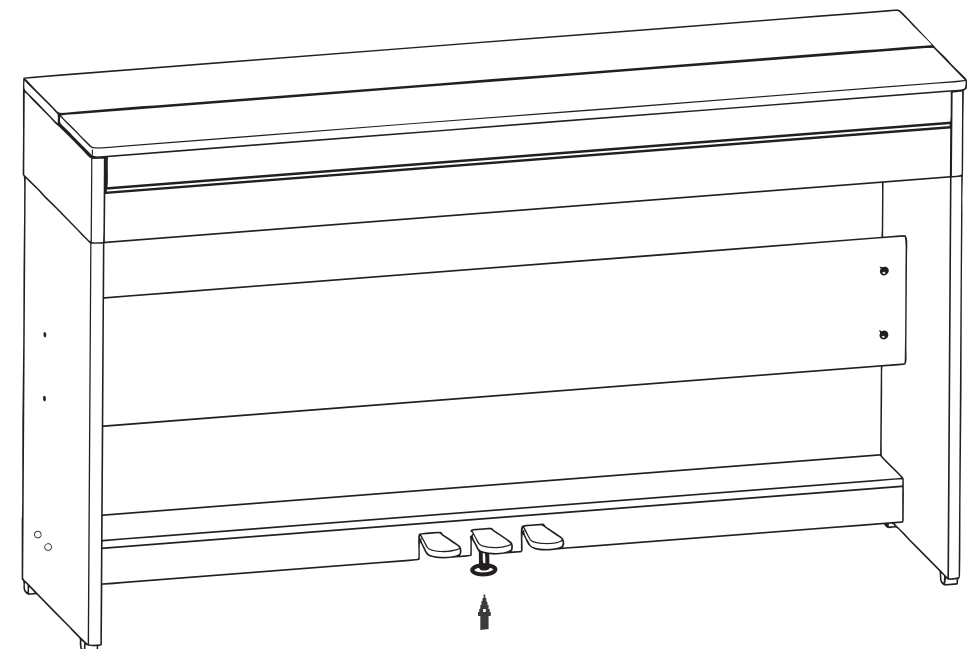

Attention : To avoid stepping on the pedal badly, the screw of footplate support should contact with the ground closely after installation

## Introduction of Function Keyboard

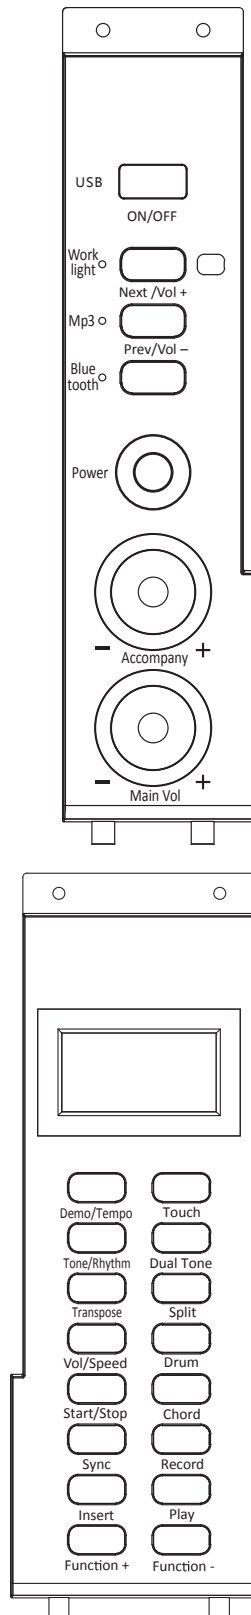

Keyboard: 88-key standard keyboard (include black key). Voice range: A1-C9

Timbre: 800 Timbre (0-799)

Rhythm: 600 rhythm (0-599)

Demo: 80 songs (0-79)

Record / Playback Function, Rhythm Function, Demo Function, Metronome Function, keyboard Drum Function.

Hardware: 64 chord, DAC output with dual 16 bits, power amplifier circuit inside

Output Function: 3 figures digital display

Sustain pedal, soft pedal, silent pedal

Tone control: Dynamics; Transpose+/-

Pedal control: 3 pedals (Sustain pedal, soft pedal, continuant pedal)

MP3 play MP3 format audio files in USB flash drive.

MIDI control: MIDI IN and OUT port, convenient to connect with intelligent devices for interaction and creation. At the same time, equipped with square USB connector to make the connection simpler and more convenient.

Record Function: Record/Playback, convenient to record a track melody under the accompaniment track.

Stereo speakers inside, providing high-quality sound effects.

Audio Input /Output Headphone: Dual headphone Jack

Other Functions: USB start/stop; Prev/Next; Demo; Timbre; Power; Rhythm;

+/- etc. universal selection function

Original allocation: Body of piano(host/keyboard stand/3 pedals/flip cover/music score/external power supply/specification/warranty card)

Fault occurs	Possible causes and countermeasures
1. When the power supply is turned on or off.	1. This is a normal phenomenon, indicating that the current into the machine.
2. When using a mobile phone, there is noise.	2. Using a mobile phone near the piano produces radiation. To avoid this, the mobile phone can be turned off or away from the use of the piano.
3. There was no sound when playing the keyboard and playing the music.	3. The text confirms that there are other devices on the PHONES / OUTPUT jack. If there are headphones plugged into the jack, there is no sound.
4. The selected tone sounds abnormal, or the volume is too small.	4. Make sure the following settings are appropriated: master volume, double timbre balance.
5. Abnormal sound of timbre or rhythm.	5. The AC voltage is on the low.
6. Some timbre distortion.	6. The volume knob is turned on too high and should be in a position less than 3 / 4
7. Abnormal pronunciation of accompaniment.	7. Make sure the accompaniment volume is set to an appropriate level.
8. It seems that all the sounds are pronounced, or the pronunciation seems to be cut off.	8. The maximum simultaneous pronunciation of this piano is 64 notes. If the dual timbre mode is being used and the accompaniment or music is played, some of the notes / sounds in the accompaniment or music will be defaulted. This is a normal phenomenon.
9. Under the same timbre, the sound quality of the note is different from that of the note.	9. The wood machine adopts the AWM sound source mode, this kind of sound source is in the entire key domain section sampling the recording, therefore two notes sound quality has the slight difference.

## 17. Attachment 2

88 Keyboard Drum Chart							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

## Welcome to use our digital piano

Congratulations on being the owner of our digital piano, it includes GM timbre, digital circuits and functions, making you enjoy the splendid melody.

We suggest that you can fully try to develop the various functions of the piano with careful reading. Safekeeping then it can be ready for checking in the future please.

## Catalogues

1. Assemble	-----1
2. Face plate	-----2
3. Catalogue	-----3
4. Specific operation	----- 4-5
5. Timbre list	----- 7-26
6. Rhythm list	----- 26-40
7. Song list	-----40-41
8. Single finger list	----- 42
9. Attachment 1	----- 43
10. Attachment 2(Drum set)	----- 46
11. Attachment 3 (MIDI)	----- 45
12. Fault cause and resolution	----- 47-48



## 一、Function Brief

- Keyboard: 88-key standard keyboard (include black key). Voice range: A1-C9
- Timbre: 800 Timbre (0-799)
- Rhythm: 600 rhythm (0-599)
- Demo: 80 songs (0-79)
- Record / Playback Function, Rhythm Function, Demo Function, Metronome Function, keyboard Drum Function.
- Hardware: 64 chord, DAC output with dual 16 bits, power amplifier circuit inside
- Output Function: 3 figures digital display
- Sustain pedal, soft pedal, silent pedal
- Tone control: Dynamics; Transpose+/-
- Pedal control: 3 pedals (Sustain pedal, soft pedal, continuant pedal)

## 二、Operating instructions

### ■ Playing (Timbre) Mode:

- 1. After startup, entering into the playing (timbre) mode.
- 2. Press on "+/-" to up/down the playing timbre
- 3. Press on "+/-" over one second to up/down the timbre
- 4. Press on "+/-" simultaneously, entering into timbre "000"

### ■ Rhythm Mode:

- 1. Press on the timbre/rhythm key twice and enter into rhythm mode, LED display "RHY". The Rhythm number will be displayed after two second.
- 2. Press on "Function+/-" and choose 【0~599】 beat. Quick choice with long press.
- 3. Press on the timbre/rhythm key, volume/tempo key, metronome/fine tuning key to switch to function+/- . LED display the previous timbre number/volume number/tempo number when adjusting the timbre/volume/tempo. Press on the timbre/Rhythm key and switch to the function of rhythm selection.
- 4. Under the Playing Mode, Press on the "synchronization key" and switch to the synchronization mode, entering into rhythm mode when pressing any keys.

### ■ Demo Mode:

- 1. Press on the demo/beat key, entering into the mode of playing, pressing function+/- to choose 1-79 songs under the mode. Quick choice with long press. The LED display "D + name of song"
- 2. Press on the timbre/rhythm key, volume/tempo key can switch to function+/-, The LED display the previous timbre number or volume/tempo number when adjusting the timbre or volume/tempo. Press on the demo/beat key can switch the demo selection function.

### ■ Metronome Mode

- 3. Press on the demo/beat key twice can enter into the metronome mode under the non-demo mode; Press on the demo/beat key one time can enter into the metronome mode under the demo mode.
- 4. Press on function+/- to select 0-3 metronome, the LED display the number of metronome.
- 5. Press on the timbre/rhythm key, volume/tempo, transpose/fine tuning can switch function+/- . The LED display the previous timbre number or volume/tempo number when adjusting the timbre or volume/tempo. Press on the demo/beat key to switch the demo selection function.

### ■ Transpose/Fine tuning

- 6. Press on the transpose/fine tuning enter into the function of transpose/fine tuning. (±6)
- 7. Transpose display T+ number Fine tuning display T+ number

## 18.Attachment 3 ( MIDI information )

Function		Midi Out	Midi In	Remarks
Basic	Default	1	1 ~ 16	
	Changed	1 ~ 16	1 ~ 16	
Mode		Mode3	Mode3	
Note Number		21 ~ 109	21 ~ 109	
Velocity	Note On	V = 1 ~ 127	V = 1 ~ 127	
	Note Off	8nH V = 64	9nH V = 0 , 8nH V = XX	XX: 无关
Pitch Bend		X	O	
Control	1	X	O	Modulation
	7	X	O	Volume
	10	X	O	Pan
	11	X	O	Expression
	64	O	O	Sustain
	67	O	O	Soft Pedal
	121	X	O	Reset All Controller
Change	123	X	O	All Sound Off
	Program Change		0 ~ 127	0 ~ 127
Aux	Local On/Off	X	X	
Messages	All notes Off	X	O	
	Active Sense	X	O	
	Reset	X	X	

Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C#/(Db)							
D							
(D#)/Eb							
E							
F							
F#/(Gb)							
G							
(G#)/Ab							
A							
(A#)/Bb							
B							

## ■ Volume/Tempo

- 8. Press on the volume/tempo key in the first time, entering into volume control mode. The LED displays VOL, and show corresponding number after two seconds.
- 9. Press on function+/- to adjust the volume (level: 0-100)
- 10. Press on the volume/tempo key in the second time and enter into the tempo control mode, the LED display S\*\*, and show corresponding number after two seconds.
- 11. Press on function+/- and enter into the play speed adjustment (level: 0-15)

## ■ Chord Mode

- 12. In the time of playing rhythm, pressing on the comprehensive chord key and enter into chord mode. Press on the comprehensive chord key in the second time and remove chord mode.
- 13. Chord function: Press on the piano key in the range of A1-D3, playing the chord which is connected with the rhythm. The tone of chord will be changed by the tone of piano key.
- 14. Press on insert key, the tum will appear in the song.

## ■ Synchronization Mode

- 15. Press on the synchronization key in the first time, entering into synchronization mode. Press on the synchronization key in the second time and remove the synchronization mode.
- 16. Stop playing the rhythm when entering into the synchronization mode, and switch into playing rhythm mode when pressing any keys.

## ■ Relevant Record Function

- 17. Press on the record key, entering into record mode, and clear the previous audio record away.
- 18. The largest record number of each audio track is 256, unable to input the next note when the recording is complete.
- 19. Press on playback key can play the note of the audio track.

## ■ Double Keyboard Mode

- 20. Press on double keyboard key in the first time can start the double keyboard function. Press on double keyboard key in the second time can stop the double keyboard function.
- 21. The left piano key: A1-B4 is corresponded with A2-B5-33-71 and the right keyboard C5-C9 is corresponded with C4-C8 when starting the double keyboard.

## ■ Dual Voice Mode

- 22. Press on the dual voice key in the first time can start the dual voice function. Press on the dual voice key in the second time can stop the dual voice function.
- 23. Main timbre can be selected by "+/-" key
- 24. Under the open of dual voice, main timbre and second timbre will make a sound when playing the piano.

## ■ Dynamics Control Function

- 25. Press on the dynamics key to start/stop the dynamics. The dynamic is opened when power-on.

## ■ USB-MIDI-IN-OUT Function:

- 26. Connect with computer or iPad through USB, entering into multimedia interaction.

## ■ Other Function

- 27. Press on Keyboard drum key can switch into piano/drum sound directly.
- 28. Sustain pedal: step on the pedal to start the sustain function, loosen the pedal to stop the sustain function.
- 29. Soft pedal: step on the pedal to reduce the volume of the key.
- 30. Silent pedal: step on the pedal to reduce the volume of the key.

# Digital Piano Handbook

Timbre		19、	Church Organ
0、	Piano 1	20、	Reed Organ
1、	Piano 2	21、	Accordion
2、	Piano 3	22、	Harmonica
3、	Honky-Tonk Piano	23、	Bandoneon
4、	Rhodes Piano	Guitar	
5、	Chorused Piano	24、	Acoustic Guitar (nylon)
6、	Harpichord	25、	Acoustic Guitar(steel)
7、	Clavinet	26、	Electric Guitar (jazz)
Percussion instrument		27、	Electric Guitar (clean)
8、	Celesta	28、	Electric Guitar (muted)
9、	Glockenspiel	29、	Overdriven Guitar
10、	Music Box	30、	Distortion Guitar
11、	Vibraphone	31、	Guitar Harmonics
12、	Marimba	32、	Acoustic Bass
13、	Xylophone	33、	Electric Bass(finger)
14、	Tubular Bells	34、	Electric Bass(pick)
15、	Santur	35、	Fretless Bass
Organ		36、	Slap Bass 1
16、	Hammond Organ	37、	Slap Bass 2
17、	Percussive Organ	38、	Synth Bass 1
18、	Rock Organ	39、	Synth Bass 2

# Digital Piano Handbook

## 16. Attachment 1

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C <sup>♯</sup> /(D <sup>♭</sup> )								
D								
(D <sup>♯</sup> )/E								
E								
F								
F <sup>♯</sup> /(G <sup>♭</sup> )								
G								
(G <sup>♯</sup> )/A								
A								
(A <sup>♯</sup> )/B								
B								

## 15: Single finger list

Single finger list [ example ]

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Solo strings		59、	Muted Trumpet
40、	Violin	60、	French Horn
41、	Viola	61、	Brass Section
42、	Cello	62、	Synth Brass 1
43、	Contrabass	63、	Synth Brass 2
44、	Tremolo Strings	Reeds instrument	
45、	Pizzicato Strings	64、	Soprano Sax
46、	Orchestral Harp	65、	Alto Sax
47、	Timpani	66、	Tenor Sax
Choral ensembles		67、	Baritone Sax
48、	String Ensemble 1	68、	Oboe
49、	String Ensemble 2	69、	English Horn
50、	SynthStrings 1	70、	Bassoon
51、	SynthStrings 2	71、	Clarinet
52、	Choir Aahs	Wind instrument	
53、	Voice Oohs	72、	Piccolo
54、	Synth Voice	73、	Flute
55、	Orchestra Hit	74、	Recorder
Brass Instrument		75、	Pan Flute
56、	Trumpet	76、	Bottle Blow
57、	Trombone	77、	Skakuhachi
58、	Tuba	78、	Whistle

# Digital Piano Handbook

79、	Ocarina	98、	FX 3 (crystal)
Lead		99、	FX 4 (atmosphere)
80、	Lead 1 (square)	100、	FX 5 (brightness)
81、	Lead 2 (sawtooth)	101、	FX 6 (goblins)
82、	Lead 3 (calliope lead)	102、	FX 7 (echoes)
83、	Lead 4 (chiff lead)	103、	FX 8 (sci-fi)
84、	Lead 5 (charang)	National Instrument	
85、	Lead 6 (voice)	104、	Sitar
86、	Lead 7 (fifths)	105、	Banjo
87、	Lead 8 (bass+lead)	106、	Shamisen
Pad		107、	Koto
88、	Pad 1 (new age)	108、	alimba
89、	Pad 2 (warm)	109、	Bagpipe
90、	Pad 3 (polysynth)	110、	Fiddle
91、	Pad 4 (choir)	111、	Shanai
92、	Pad 5 (bowed)	Percussion	
93、	Pad 6 (metallic)	112、	Tinkle Bell
94、	Pad 7 (halo)	113、	Agogo
95、	Pad 8 (sweep)	114、	Steel Drums
FX		115、	Woodblock
96、	FX 1 (rain)	116、	Taiko Drum
97、	FX 2 (soundtrack)	117、	Melodic Tom

# Digital Piano Handbook

41、	Unchained melody	63、	Days on my past
42、	Croatian Rhapsody	64、	Breakfast in Tiffany
43、	Military Polonaise	65、	Schubert piano sonatas
44、	Decade	66、	Dancing girl
45、	Fountain	67、	Rhapsody in blue
46、	Four cygnets	68、	Endless Love
47、	BACH MAGNIFICAT	69、	A cold in the corner
48、	Annie's song.	70、	Snow at the Beginning of Misty Forest
49、	The sound of silence	71、	Mail carriage
50、	Waltz.	72、	Edelweiss
51、	Serenade	73、	Magic goldfish
52、	The Maiden's Prayer	74、	Les Premiers Sourires De Vanessa
53、	BACH GAMMON	75、	Gorgeous Waltz
54、	Wilderness	76、	Mario
55、	Spring field	77、	Sad or happy
56、	Wedding in dream	78、	rhythm of the rain
57、	Dream drops	79、	gavotte
58、	Adelina by the water	80、	Chopin
59、	Banderry Liuli Lake		
60、	Myth		
61、	A Comm amour		
62、	jardin secret		



# Digital Piano Handbook

597、	R.roll1-5	19、	Dance of firefly
598、	R.roll2-5	20、	Sibelius Humoresque 1
599、	Fastbeat5	21、	Minuet in G major
Demo		22、	Moon River
1、	Turkish march	23、	The melody of memories
2、	The Blue Danube	24、	Aikesaisi dance
3、	Menuette WoO	25、	Queen of the Night
4、	Radetzky March	26、	Green Sleeves
5、	Nutcracker, Op.	27、	Clouds Chasing the Moon
6、	Für Elise	28、	Nian Chungui
7、	Lily	29、	Homecoming
8、	Winter Sonata Wedding 1	30、	Waltz mc
9、	Gwiyomi Song	31、	Love romance
10、	Beautiful Jazz	32、	starlit sky
11、	he Enchanted Forest's Neptune	33、	Romeo and Juliet
12、	Destiny	34、	Scanon
13、	Poet of the bird	35、	Childhood memories
14、	Milk song	36、	Beer barrel polka
15、	childhood memory	37、	The Lonely Goatherd
16、	You Exist in My Song	38、	Bandari
17、	Sibelius Humoresque	39、	SPANISH GYPSY DANCE
18、	Snowdreams	40、	Rhythm of rain

# Digital Piano Handbook

118、	Synth Drum	138、	Rhodes Piano_2
119、	Reverse Cymbal	139、	Chorused Piano_2
Sound Effects		140、	Harpsichord_2
120、	Guitar Fret Noise	141、	Clavinet_2
121、	Breath Noise	Percussion instrument 2	
122、	Seashore	142、	Celesta_2
123、	Bird Tweet	143、	Glockenspiel_2
124、	Telephone Ring	144、	Music Box_2
125、	Helicopter	145、	Vibraphone_2
126、	Applause	146、	Marimba_2
127、	Gun shot	147、	Xylophone_2
128、	PiPa 1	148、	Tubular Bells_2
129、	PiPa 2	149、	Santur_2
130、	Luan	Organ 2	
131、	GuZhen	150、	Hammond Organ_2
132、	ErHu	151、	Percussive Organ_2
133、	Bandivc	152、	Rock Organ_2
Piano2		153、	Church Organ_2
134、	Piano 1_2	154、	Reed Organ_2
135、	Piano 2_2	155、	Accordion_2
136、	Piano 3_2	156、	Harmonica_2
137、	Honky-Tonk Piano_2	157、	Bandoneon_2

# Digital Piano Handbook

Guitar 2		177、	Contrabass_2
158、	Acoustic Guitar (nylon)_2	178、	Tremolo Strings_2
159、	Acoustic Guitar(steel)_2	179、	Pizzicato Strings_2
160、	Electric Guitar (jazz)_2	180、	Orchestral Harp_2
161、	Electric Guitar (clean)_2	181、	Timpani
162、	Electric Guitar (muted)_2	Choral ensembles 2	
163、	Overdriven Guitar_2	182、	String Ensemble 1_2
164、	Distortion Guitar_2	183、	String Ensemble 2_2
165、	Guitar Harmonics_2	184、	SynthStrings 1_2
Bass 2		185、	SynthStrings 2_2
166、	Acoustic Bass_2	186、	Choir Aahs_2
167、	Electric Bass(finger)_2	187、	Voice Oohs_2
168、	Electric Bass(pick)_2	188、	Synth Voice_2
169、	Fretless Bass_2	189、	Orchestra Hit_2
170、	Slap Bass 1_2	Brass Instrument 2	
171、	Slap Bass 2_2	190、	Trumpet_2
172、	Synth Bass 1_2	191、	Trombone_2
173、	Synth Bass 2_2	192、	Tuba_2
Solo strings 2		193、	Muted Trumpet_2
174、	Violin_2	194、	French Horn_2
175、	Viola_2	195、	Brass Section_2
176、	Cello_2	196、	Synth Brass 1_2

# Digital Piano Handbook

553、	Easyswing5	575、	Boodie3-5
554、	Softswing5	576、	Shuffle1-5
555	Rock1 5	577、	Shuffle2-5
556、	Rock2-5	578、	Dreamshuffle5
557、	Rock3-5	579、	Countrysshuffle5
558、	Airyrock5	580、	Quickshuffle5
559、	Heartrock5	581、	Reggaeshuffle5
560、	Rock&roll5	582、	R&B5
561、	Urban5	583、	Reggae1-5
562、	Ballad5	584、	Reggae2-5
563、	Jazzballad5	585、	Reggae3-5
564、	C.ballad5	586、	Salsa1-5
565、	J.ballad5	587、	Salsa2-5
566、	60Slowballad5	588、	Salsa3-5
567、	PianoBallad5	589、	Tecno1-5
568、	50Sballad5	590、	Tecno2-5
569、	Snakebase5	591、	Funky1-5
570、	Happyblues5	592、	Funky2-5
571、	Oldblues5	593、	Dixie1-5
572、	Bluegras5	594、	Dixie2-5
573、	Boodie1-5	595、	Foxtrot1-5
574、	Boodie2-5	596、	Foxtrot2-5

# Digital Piano Handbook

509、	Slowrc4	531、	March2-5
510、	Soul4	532、	Rhumba1-5
511、	Twist4	533、	Rhumba2-5
512、	Beguineswing5	534、	Slow1-5
513、	Beguin1-5	535、	Slow2-5
514、	Beguine2-5	536、	Discocha5
515、	Pophit5	537、	Guaracha5
516、	Pop5	538、	Charl5
517、	Popmalay5	539、	Samba1-5
518、	Bossanova5	540、	Samba2-5
519、	Disco1-5	541、	Ubminimal5
520、	Disco2-5	542、	18Bit5
521、	Bluegrassdisco5	543、	58Bit5
522、	Waltz11-5	544、	16Bit1-5
523、	Waltz12-5	545、	16Bit2-5
524、	Trueballadwaltz5	546、	Ballad16T5
525、	Bossawaltz5	547、	Country16T5
526、	Easywaltz5	548、	Tango1-5
527、	Shufflewaltz5	549、	Tango2-5
528、	Reggaewaltz5	550、	Polka1-5
529、	Rhumbawaltz5	551、	Polka2-5
530、	March1-5	552、	Popswing5

# Digital Piano Handbook

197、	Synth Brass 2_2	216、	Lead 3 (calliope lead)_2
Reeds instrument 2		217、	Lead 4 (chiff lead)_2
198、	Soprano Sax_2	218、	Lead 5 (charang)_2
199、	Alto Sax_2	219、	Lead 6 (voice)_2
200、	Tenor Sax_2	220、	Lead 7 (fifths)_2
201、	Baritone Sax_2	221、	Lead 8 (bass+lead)_2
202、	Oboe_2	Pad 2	
203、	English Horn_2	222、	Pad 1 (new age)_2
204、	Bassoon_2	223、	Pad 2 (warm)_2
205、	Clarinet_2	224、	Pad 3 (polysynth)_2
Wind instrument 2		225、	Pad 4 (choir)_2
206、	Piccolo_2	226、	Pad 5 (bowed)_2
207、	Flute_2	227、	Pad 6 (metallic)_2
208、	Recorder_2	228、	Pad 7 (halo)_2
209、	Pan Flute_2	229、	Pad 8 (sweep)_2
210、	Bottle Blow_2	FX 2	
211、	Skakuhachi_2	230、	FX 1 (rain)_2
212、	Whistle_2	231、	FX 2 (soundtrack)_2
213、	Ocarina_2	232、	FX 3 (crystal)_2
Lead 2		233、	FX 4 (atmosphere)_2
214、	Lead 1 (square)_2	234、	FX 5 (brightness)_2
215、	Lead 2 (sawtooth)_2	235、	FX 6 (goblins)_2

# Digital Piano Handbook

236、	FX 7 (echoes)_2	255、	Breath Noise_2
237、	FX 8 (sci-fi)	256、	Seashore_2
National Instrument 2		257、	Bird Tweet_2
238、	Sitar_2	258、	Telephone Ring_2
239、	Banjo_2	259、	Helicopter_2
240、	Shamisen_2	260、	Applause_2
241、	Koto_2	261、	Gun shot_2
242、	alimba_2	262、	PiPa1_2
243、	Bagpipe_2	263、	PiPa2_2
244、	Fiddle_2	264、	Luan_2
245、	Shanai_2	265、	GuZhen_2
Percussion 2		266、	ErHu_2
246、	Tinkle Bell_2	267、	Bandivc_2
247、	Agogo_2	Piano3	
248、	Steel Drums_2	268、	Piano 1_3
249、	Woodblock_2	269、	Piano 2_3
250、	Taiko Drum_2	270、	Piano 3_3
251、	Melodic Tom_2	271、	Honky-Tonk Piano_3
252、	Synth Drum_2	272、	Rhodes Piano_3
253、	Reverse Cymbal_2	273、	Chorused Piano_3
Sound Effects 2		274、	Harpsichord_3
254、	Guitar Fret Noise_2	275、	Clavinet_3

# Digital Piano Handbook

465、	Dixie1-4	487、	Easywalk4
466、	Dixie2-4	488、	Destiny4
467、	Foxtrot1-4	489、	Comedy4
468、	Foxtrot2-4	490、	Drive4
469、	R.roll1-4	491、	Liquidnova4
470、	R.roll2-4	492、	KIndustrialfolk4
471、	Fastbeat4	493、	Slowpure4
472、	Quickbeat4	494、	SimpleJam4
473、	Smoothbeat 4	495、	Synthethix4
474、	Squarebeat4	496、	Feel4
475、	Eurobeat4	497、	Accelerate4
476、	Alphadance4	498、	Beachnight4
477、	Betadance4	499、	Irish4
478、	Dreamdance4	500、	Tarantella4
479、	Dance1-4	501、	Bigband4
480、	Dance2-4	502、	Dandut4
481、	Dance3-4	503、	fusion4
482、	Rap4	504、	Horse4
483、	Thevillage4	505、	Keron4
484、	Countryshuffle4	506、	Latin4
485、	Electrickeys4	507、	Mambo4
486、	Darkkeys4	508、	Newage4

# Digital Piano Handbook

421、	Tango2-4	443、	Oldblues4
422、	Polka1-4	444、	Bluegras4
423、	Polka2-4	445、	Boodie1-4
424、	Popswing4	446、	Boodie2-4
425、	Easyswing4	447、	Boodie3-4
426、	Softswing4	448、	Shuffle1-4
427、	Rock1-4	449、	Shuffle2-4
428、	Rock2-4	450、	Dreamshuffle4
429、	Rock3-4	451、	Countrysuffle4
430、	Airyrock4	452、	Quickshuffle4
431、	Heartrock4	453、	Reggaeshuffle4
432、	Rock&roll4	454、	R&B4
433、	Urban4	455、	Reggae1-4
434、	Ballad4	456、	Reggae2-4
435、	Jazzballad4	457、	Reggae3-4
436、	C.ballad4	458、	Salsa1-4
437、	J.ballad4	459、	Salsa2-4
43、	60Slowballad4	460、	Salsa3-4
439、	PianoBallad4	461、	Tecno1-4
440、	50Sballad4	462、	Tecno2-4
441、	Snakebase4	463、	Funky1-4
442、	Happyblues4	464、	Funky2-4

# Digital Piano Handbook

Percussion instrument 3		295、	Electric Guitar (clean)_3
276、	Celesta_3	296、	Electric Guitar (muted)_3
277、	Glockenspiel_3	297、	Overdriven Guitar_3
278、	Music Box_3	298、	Distortion Guitar_3
279、	Vibraphone_3	299、	Guitar Harmonics_3
280、	Marimba_3	Bass 3	
281、	Xylophone_3	300、	Acoustic Bass_3
282、	Tubular Bells_3	301、	Electric Bass(finger)_3
283、	Santur_3	302、	Electric Bass(pick)_3
Organ 3		303、	Fretless Bass_3
284、	Hammond Organ_3	304、	Slap Bass 1_3
285、	Percussive Organ_3	305、	Slap Bass 2_3
286、	Rock Organ_3	306、	Synth Bass 1_3
287、	Church Organ_3	307、	Synth Bass 2_3
288、	Reed Organ_3	Solo strings 3	
289、	Accordion_3	308、	Violin_3
290、	Harmonica_3	309、	Viola_3
291、	Bandoneon_3	310、	Cello_3
Guitar 3		311、	Contrabass_3
292、	Acoustic Guitar (nylon)_3		
293、	Acoustic Guitar(steel)_3		
294、	Electric Guitar (jazz)_3		



# Digital Piano Handbook

312、	Tremolo Strings_3	Reeds instrument 3	
313、	Pizzicato Strings_3	332、	Soprano Sax_3
314、	Orchestral Harp_3	333、	Alto Sax_3
315、	Timpani	334、	Tenor Sax_3
Choral ensembles 3		335、	Baritone Sax_3
316、	String Ensemble 1_3	336、	Oboe_3
317、	String Ensemble 2_3	337、	English Horn_3
318、	SynthStrings 1_3	338、	Bassoon_3
319、	SynthStrings 2_3	339、	Clarinet_3
320、	Choir Aahs_3	Wind instrument 3	
321、	Voice Oohs_3	340、	Piccolo_3
322、	Synth Voice_3	341、	Flute_3
323、	Orchestra Hit_3	342、	Recorder_3
Brass Instrument 3		343、	Pan Flute_3
324、	Trumpet_3	344、	Bottle Blow_3
325、	Trombone_3	345、	Skakuhachi_3
326、	Tuba_3	346、	Whistle_3
327、	Muted Trumpet_3	347、	Ocarina_3
328、	French Horn_3	Lead 3	
329、	Brass Section_3	348、	Lead 1 (square)_3
330、	Synth Brass 1_3	349、	Lead 2 (sawtooth)_3
331、	Synth Brass 2_3	350、	Lead 3 (calliope lead)_3

# Digital Piano Handbook

377、	Keron3	399、	Shufflewaltz4
378、	Latin3	400、	Reggaewaltz4
379、	Mambo3	401、	Rhumbawaltz4
380、	Newage3	402、	March1-4
381、	Slowrc3	403、	March2-4
382、	Soul3	404、	Rhumba1-4
383、	Twist3	405、	Rhumba2-4
384、	Beguineswing4	406、	Slow1-4
385、	Beguin1-4	407、	Slow2-4
386、	Beguine2-4	408、	Discocha4
387、	Pophit4	409、	Guaracha4
388、	Pop4	410、	Charl4
389、	Popmalay4	411、	Samba1-4
390、	Bossanova4	412、	Samba2-4
391、	Disco1-4	413、	Ubminimal4
392、	Disco2-4	414、	18Bit4
393、	Bluegrassdisco4	415、	28Bit4
394、	Waltz11-4	416、	16Bit1-4
395、	Waltz12-4	417、	16Bit2-4
396、	Trueballadwaltz4	418、	Ballad16T4
397、	Bossawaltz4	419、	Country16T4
398、	Easywaltz4	420、	Tango1-4

# Digital Piano Handbook

333、	Tecno1-3	355、	Thevillage3
334、	Tecno2-3	356、	Countrysuffle3
335、	Funky1-3	357、	Electrickeys3
336、	Funky2-3	358、	Darkkeys3
337、	Dixie1-3	359、	Easywalk3
338、	Dixie2-3	360、	Destiny3
339、	Foxtrot1-3	361、	Comedy3
340、	Foxtrot2-3	362、	Drive3
341、	R.roll1-3	363、	Liquidnova3
342、	R.roll2-3	364、	KIndustrialfolk3
343、	Fastbeat3	365、	Slowpure3
344、	Quickbeat3	366、	SimpleJam3
345、	Smoothbeat 3	367、	Synthethix3
346、	Squarebeat3	368、	Feel3
347、	Eurobeat3	369、	Accelerate3
348、	Alphadance3	370、	Beachnight3
349、	Betadance3	371、	Irish3
350、	Dreamdance3	372、	Tarantella3
351、	Dance1-3	373、	Bigband3
352、	Dance2-3	374、	Dandut3
353、	Dance3-3	375、	fusion3
354、	Rap3	376、	Horse3

# Digital Piano Handbook

351、	Lead 4 (chiff lead)_3	371、	FX 8 (sci-fi)
352、	Lead 5 (charang)_3	National Instrument 3	
353、	Lead 6 (voice)_3	372、	Sitar_3
354、	Lead 7 (fifths)_3	373、	Banjo_3
355、	Lead 8 (bass+lead)_3	374、	Shamisen_3
Pad 3		375、	Koto_3
356、	Pad 1 (new age)_3	376、	alimba_3
357、	Pad 2 (warm)_3	377、	Bagpipe_3
358、	Pad 3 (polysynth)_3	378、	Fiddle_3
359、	Pad 4 (choir)_3	379、	Shanai_3
360、	Pad 5 (bowed)_3	Percussion 3	
361、	Pad 6 (metallic)_3	380、	Tinkle Bell_3
362、	Pad 7 (halo)_3	381、	Agogo_3
363、	Pad 8 (sweep)_3	382、	Steel Drums_3
FX 3		383、	Woodblock_3
364、	FX 1 (rain)_3	384、	Taiko Drum_3
365、	FX 2 (soundtrack)_3	385、	Melodic Tom_
366、	FX 3 (crystal)_3	386、	Synth Drum_3
367、	FX 4 (atmosphere)_3	387、	Reverse Cymbal_3
368、	FX 5 (brightness)_3	Sound Effects 3	
369、	FX 6 (goblins)_3	388、	Guitar Fret Noise_3
370、	FX 7 (echoes)_3	389、	Breath Noise_3

# Digital Piano Handbook

390、	Seashore_3	410、	Celesta_4
391、	Bird Tweet_3	411、	Glockenspiel_4
392、	Telephone Ring_3	412、	Music Box_4
393、	Helicopter_3	413、	Vibraphone_4
394、	Applause_3	414、	Marimba_4
395、	Gun shot_3	415、	Xylophone_4
396、	PiPa1_3	416、	Tubular Bells_4
397、	PiPa2_3	417、	Santur_4
398、	Luan_3	Organ 4	
399、	GuZhen_3	418、	Hammond Organ_4
400、	ErHu_3	419、	Percussive Organ_4
401、	Bandivc_3	420、	Rock Organ_4
Piano4		421、	Church Organ_4
402、	Piano 1_4	422、	Reed Organ_4
403、	Piano 2_4	423、	Accordion_4
404、	Piano 3_4	424、	Harmonica_4
405、	Honky-Tonk Piano_4	425、	Bandoneon_4
406、	Rhodes Piano_4	Guitar 4	
407、	Chorused Piano_3	426、	Acoustic Guitar (nylon)_4
408、	Harpsichord_4	427、	Acoustic Guitar(steel)_4
409、	Clavinet_4	428、	Electric Guitar (jazz)_4
Percussion instrument 4		429、	Electric Guitar (clean)_4

# Digital Piano Handbook

289、	16Bit2-3	311、	PianoBallad3
290、	Ballad16T3	312、	50Sballad3
291、	Country16T3	313、	Snakebase3
292、	Tango1-3	314、	Happyblues3
293、	Tango2-3	315、	Oldblues3
294、	Polka1-3	316、	Bluegras3
295、	Polka2-3	317、	Boodie1-3
296、	Popswing3	318、	Boodie2-3
297、	Easyswing3	319、	Boodie3-3
298、	Softswing3	320、	Shuffle1-3
299、	Rock1-3	321、	Shuffle2-3
300、	Rock2-3	322、	Dreamshuffle3
301、	Rock3-3	323、	Countryshuffle3
302、	Airyrock3	324、	Quickshuffle3
303、	Heartrock3	325、	Reggaeshuffle3
304、	Rock&roll3	326、	R&B3
305、	Urban3	327、	Reggae1-3
306、	Ballad3	328、	Reggae2-3
307、	Jazzballad3	329、	Reggae3-3
308、	C.ballad3	330、	Salsa1-3
309、	J.ballad3	331、	Salsa2-3
310、	60Slowballad3	332、	Salsa3-3

# Digital Piano Handbook

245、	Bigband2	267、	Waltz12-3
246、	Dandut2	268、	Trueballadwaltz3
247、	fusion2	269、	Bossawaltz3
248、	Horse2	270、	Easywaltz3
249、	Keron2	271、	Shufflewaltz3
250、	Latin2	272、	Reggaewaltz3
251、	Mambo2	273、	Rhumbawaltz3
252、	Newage2	274、	March1-3
253、	Slowrc2	275、	March2-3
254、	Soul2	276、	Rhumba1-3
255、	Twist2	277、	Rhumba2-3
256、	Beguineswing3	278、	Slow1-3
257、	Beguine1-3	279、	Slow2-3
258、	Beguine2-3	280、	Discocha3
259、	Pophit3	281、	Guaracha3
260、	Pop3	282、	Charl3
261、	Popmalay3	283、	Samba1-3
262、	Bossanova3	284、	Samba2-3
263、	Disco1-3	285、	Ubminimal3
264、	Disco2-3	286、	18Bit3
265、	Bluegrassdisco3	287、	28Bit3
266、	Waltz11-3	288、	16Bit1-3

# Digital Piano Handbook

430、	Electric Guitar (muted)_4	Choral ensembles 4	
431、	Overdriven Guitar_4	450、	String Ensemble 1_4
432、	Distortion Guitar_4	451、	String Ensemble 2_4
433、	Guitar Harmonics_4	452、	SynthStrings 1_4
Bass 4		453、	SynthStrings 2_4
434、	Acoustic Bass_4	454、	Choir Aahs_4
435、	Electric Bass(finger)_4	455、	Voice Oohs_4
436、	Electric Bass(pick)_4	456、	Synth Voice_4
437、	Fretless Bass_4	457、	Orchestra Hit_4
438、	Slap Bass 1_4	Brass Instrument 4	
439、	Slap Bass 2_4	458、	Trumpet_4
440、	Synth Bass 1_4	469、	Trombone_4
441、	Synth Bass 2_4	460、	Tuba_4
Solo strings 4		461、	Muted Trumpet_4
442、	Violin_4	462、	French Horn_4
443、	Viola_4	463、	Brass Section_4
444、	Cello_4	464、	Synth Brass 1_4
445、	Contrabass_4	465、	Synth Brass 2_4
446、	Tremolo Strings_4	Reeds instrument 4	
447、	Pizzicato Strings_4	466、	Soprano Sax_4
448、	Orchestral Harp_4	467、	Alto Sax_4
449、	Timpani	468、	Tenor Sax_4

# Digital Piano Handbook

469、	Baritone Sax_4	489、	Lead 8 (bass+lead)_4
470、	Oboe_4	Pad 4	
471、	English Horn_4	490、	Pad 1 (new age)_4
472、	Bassoon_4	491、	Pad 2 (warm)_4
473、	Clarinet_4	492、	Pad 3 (polysynth)_4
Wind instrument 4		493、	Pad 4 (choir)_4
474、	Piccolo_4	494、	Pad 5 (bowed)_4
475、	Flute_4	495、	Pad 6 (metallic)_4
476、	Recorder_4	496、	Pad 7 (halo)_4
477、	Pan Flute_4	497、	Pad 8 (sweep)_4
478、	Bottle Blow_4	FX 4	
479、	Skakuhachi_4	498、	FX 1 (rain)_4
480、	Whistle_4	499、	FX 2 (soundtrack)_4
481、	Ocarina_4	500、	FX 3 (crystal)_4
Lead 4		501、	FX 4 (atmosphere)_4
482、	Lead 1 (square)_4	502、	FX 5 (brightness)_4
483、	Lead 2 (sawtooth)_4	503、	FX 6 (goblins)_4
484、	Lead 3 (calliope lead)_4	504、	FX 7 (echoes)_4
485、	Lead 4 (chiff lead)_4	505、	FX 8 (sci-fi)
486、	Lead 5 (charang)_4	National Instrument 4	
487、	Lead 6 (voice)_4	506、	Sitar_4
488、	Lead 7 (fifths)_4	507、	Banjo_4

# Digital Piano Handbook

201、	Reggae3-2	223、	Dance1-2
202、	Salsa1-2	224、	Dance2-2
203、	Salsa2-2	225、	Dance3-2
204、	Salsa3-2	226、	Rap2
205、	Tecno1-2	227、	Thevillage2
206、	Tecno2-2	228、	Countryshuffle2
207、	Funky1-2	229、	Electrickeys2
208、	Funky2-2	230、	Darkkeys2
209、	Dixie1-2	231、	Easywalk2
210、	Dixie2-2	232、	Destiny2
211、	Foxtrot1-2	233、	Comedy2
212、	Foxtrot2-2	234、	Drive2
213、	R.roll1-2	235、	Liquidnova2
214、	R.roll2-2	236、	KIndustrialfolk2
215、	Fastbeat2	237、	Slowpure2
216、	Quickbeat2	238、	SimpleJam2
217、	Smoothbeat 2	239、	Synthethix2
218、	Squarebeat2	240、	Feel2
219、	Eurobeat2	241、	Accelerate2
220、	Alphadance2	242、	Beachnight2
221、	Betadance2	243、	Irish2
222、	Dreamdance2	244、	Tarantella2



# Digital Piano Handbook

157、	Ubminimal2	179、	Jazzballad2
158、	18Bit2	180、	C.ballad2
159、	28Bit2	181、	J.ballad2
160、	16Bit1-2	182、	60Slowballad2
161、	16Bit2-2	183、	PianoBallad2
162、	Ballad16T2	184、	50Sballad2
163、	Country16T2	185、	Snakebase2
164、	Tango1-2	186、	Happyblues2
165、	Tango2-2	187、	Oldblues2
166、	Polka1-2	188、	Bluegras2
167、	Polka2-2	189、	Boodie1-2
168、	Popswing2	190、	Boodie2-2
169、	Easyswing2	191、	Boodie3-2
170、	Softswing2	192、	Shuffle1-2
171、	Rock1-2	193、	Shuffle2-2
172、	Rock2-2	194、	Dreamshuffle2
173、	Rock3-2	195、	Countryshuffle2
174、	Airyrock2	196、	Quickshuffle2
175、	Heartrock2	197、	Reggaeshuffle2
176、	Rock&roll2	198、	R&B2
177、	Urban2	199、	Reggae1-2
178、	Ballad2	200、	Reggae2-2

# Digital Piano Handbook

508、	Shamisen_4	528、	Applause_4
509、	Koto_4	529、	Gun shot_4
510、	alimba_4	530、	PiPa1_4
511、	Bagpipe_4	531、	PiPa2_4
512、	Fiddle_4	532、	Luan_4
513、	Shanai_4	533、	GuZhen_4
Percussion 4		534、	ErHu_4
514、	Tinkle Bell_4	535、	Bandive_4
515、	Agogo_4	Piano5	
516、	Steel Drums_4	536、	Piano 1_5
517、	Woodblock_4	537、	Piano 2_5
518、	Taiko Drum_4	538、	Piano 3_5
519、	Melodic Tom_4	539、	Honky-Tonk Piano_5
520、	Synth Drum_4	540、	Rhodes Piano_5
521、	Reverse Cymbal_4	541、	Chorused Piano_3
Sound Effects 4		542、	Harpsichord_5
522、	Guitar Fret Noise_4	543、	Clavinet_5
523、	Breath Noise_4	Percussion instrument 5	
524、	Seashore_4	544、	Celesta_5
525、	Bird Tweet_4	545、	Glockenspiel_5
526、	Telephone Ring_4	546、	Music Box_5
527、	Helicopter_4	547、	Vibraphone_5

# Digital Piano Handbook

548、	Marimba_5	Bass 5	
549、	Xylophone_5	568、	Acoustic Bass_5
550、	Tubular Bells_5	569、	Electric Bass(finger)_5
551、	Santur_5	570、	Electric Bass(pick)_5
Organ 5		571、	Fretless Bass_5
552、	Hammond Organ_5	572、	Slap Bass 1_5
553、	Percussive Organ_5	573、	Slap Bass 2_5
554、	Rock Organ_5	574、	Synth Bass 1_5
555、	Church Organ_5	575、	Synth Bass 2_5
556、	Reed Organ_5	Solo strings 5	
557、	Accordion_5	576、	Violin_5
558、	Harmonica_5	577、	Viola_5
559、	Bandoneon_5	578、	Cello_5
Guitar 5		579、	Contrabass_5
560、	Acoustic Guitar (nylon)_5	580、	Tremolo Strings_5
561、	Acoustic Guitar(steel)_5	581、	Pizzicato Strings_5
562、	Electric Guitar (jazz)_5	582、	Orchestral Harp_5
563、	Electric Guitar (clean)_5	583、	Timpani
564、	Electric Guitar (muted)_5	Choral ensembles 5	
565、	Overdriven Guitar_5	584、	String Ensemble 1_5
566、	Distortion Guitar_5	585、	String Ensemble 2_5
567、	Guitar Harmonics_5	586、	SynthStrings 1_5

# Digital Piano Handbook

113、	Accelerate	135、	Disco1-2
114、	Beachnight	136、	Disco2-2
115、	Irish	137、	Bluegrassdisco2
116、	Tarantella	138、	Waltz11-2
117、	Bigband	139、	Waltz12-2
118、	Dandut	140、	Trueballadwaltz2
119、	Fusion	141、	Bossawaltz2
120、	Horse	142、	Easywaltz2
121、	Keron	143、	Shufflewaltz2
122、	Latin	144、	Reggaewaltz2
123、	Mambo	145、	Rhumbawaltz2
124、	Newage	146、	March1-2
125、	Slowrc	147、	March2-2
126、	Soul	148、	Rhumba1-2
127、	Twist	149、	Rhumba2-2
128、	Beguineswing2	150、	Slow1-2
129、	Beguin1-2	151、	Slow2-2
130、	Beguine2-2	152、	Discocha2
131、	Pophit2	153、	Guaracha2
132、	Pop2	154、	Char12
133、	Popmalay2	155、	Samba1-2
134、	Bossanova2	156、	Samba2-2

# Digital Piano Handbook

69、	Reggaeshuffle	91、	Eurobeat
70、	R&B	92、	Alphadance
71、	Reggae	93、	Betadance
72、	Reggae	94、	Dreamdance
73、	Reggae	95、	Dance1
74、	Salsa1	96、	Dance2
75、	Salsa2	97、	Dance3
76、	Salsa3	98、	Rap
77、	Tecno1	99、	Thevillage
78、	Tecno2	100、	Countrysuffle
79、	Funky1	101、	Electrickeys
80、	Funky2	102、	Darkkeys
81、	Dixie1	103、	Easywalk
82、	Dixie2	104、	Destiny
83、	Foxtrot1	105、	Comedy
84、	Foxtrot2	106、	Drive
85、	R.roll1	107、	Liquidnova
86、	R.roll 2	108、	KIndustrialfolk
87、	Fastbeat	109、	Slowpure
88、	Quickbeat	110、	SimpleJam
89、	Smoothbeat	111、	Synthethix
90、	Squarebeat	112、	Feel

# Digital Piano Handbook

587、	SynthStrings 2_5	607、	Clarinet_5
588、	Choir Aahs_5	Wind instrument 5	
589、	Voice Oohs_5	608、	Piccolo_5
590、	Synth Voice_5	609、	Flute_5
591、	Orchestra Hit_5	610、	Recorder_5
Brass Instrument 5		611、	Pan Flute_5
592、	Trumpet_5	612、	Bottle Blow_5
593、	Trombone_5	613、	Skakuhachi_5
594、	Tuba_5	614、	Whistle_5
595、	Muted Trumpet_5	615、	Ocarina_5
596、	French Horn_5	Lead 5	
597、	Brass Section_5	616、	Lead 1 (square)_5
598、	Synth Brass 1_5	617、	Lead 2 (sawtooth)_5
599、	Synth Brass 2_5	618、	Lead 3 (calliope lead)_5
Reeds instrument 5		619、	Lead 4 (chiff lead)_5
600、	Soprano Sax_5	620、	Lead 5 (charang)_5
601、	Alto Sax_5	621、	Lead 6 (voice)_5
602、	Tenor Sax_5	622、	Lead 7 (fifths)_5
603、	Baritone Sax_5	623、	Lead 8 (bass+lead)_5
604、	Oboe_5	Pad 5	
605、	English Horn_5	624、	Pad 1 (new age)_5
606、	Bassoon_5	625、	Pad 2 (warm)_5

# Digital Piano Handbook

626、	Pad 3 (polysynth)_5	646、	Fiddle_5
627、	Pad 4 (choir)_5	647、	Shanai_5
628、	Pad 5 (bowed)_5	Percussion 5	
629、	Pad 6 (metallic)_5	648、	Tinkle Bell_5
630、	Pad 7 (halo)_5	649、	Agogo_5
631、	Pad 8 (sweep)_5	650、	Steel Drums_5
FX 5		651、	Woodblock_5
632、	FX 1 (rain)_5	652、	Taiko Drum_5
633、	FX 2 (soundtrack)_5	653、	Melodic Tom_5
634、	FX 3 (crystal)_5	654、	Synth Drum_5
635、	FX 4 (atmosphere)_5	655、	Reverse Cymbal_5
636、	FX 5 (brightness)_5	Sound Effects 5	
637、	FX 6 (goblins)_5	656、	Guitar Fret Noise_5
638、	FX 7 (echoes)_5	657、	Breath Noise_5
639、	FX 8 (sci-fi)	658、	Seashore_5
National Instrument 5		659、	Bird Tweet_5
640、	Sitar_5	660、	Telephone Ring_5
641、	Banjo_5	661、	Helicopter_5
642、	Shamisen_5	662、	Applause_5
643、	Koto_5	663、	Gun shot_5
644、	alimba_5	664、	PiPa1_5
645、	Bagpipe_5	665、	PiPa2_5

# Digital Piano Handbook

25、	Guaracha	47、	Heartrock
26、	Charl	48、	Rock&roll
27、	Samba1	49、	Urban
28、	Samba2	50、	Ballad
29、	Ubminimal	51、	Jazzballad
30、	18Bit	52、	C.ballad
31、	28Bit	53、	J.ballad
32、	16Bit1	54、	60Slowballad
33、	16Bit2	55、	PianoBallad
34、	Ballad16T	56、	50Sballad
35、	Country16T	57、	Snakebase
36、	Tango1	58、	Happyblues
37、	Tango2	59、	Oldblues
38、	Polka1	60、	Bluegras
39、	Polka2	61、	Boodie1
40、	Popswing	62、	Boodie2
41、	Easyswing	63、	Boodie3
42、	Softswing	64、	Shuffle1
43、	Rock1	65、	Shuffle2
44、	Rock2	66、	Dreamshuffle
45、	Rock3	67、	Countryshuffle
46、	Airyrock	68、	Quickshuffle

# Digital Piano Handbook

783、	Agogo_6	3、	Pophit
784、	Steel Drums_6	4、	Pop
785、	Woodblock_6	5、	Popmalay
786、	Taiko Drum_6	6、	Bossanova
787、	Melodic Tom_6	7、	Disco1
788、	Synth Drum_6	8、	Disco2
789、	Reverse Cymbal_6	9、	Bluegrassdisco
Sound Effects 6		10、	Waltz11
790、	Guitar Fret Noise_6	11、	Waltz12
791、	Breath Noise_6	12、	Trueballadwaltz
792、	Seashore_6	13、	Bossawaltz
793、	Bird Tweet_6	14、	Easywaltz
794、	Telephone Ring_6	15、	Shufflewaltz
795、	Helicopter_6	16、	Reggaewaltz
796、	Applause_6	17、	Rhumbawaltz
797、	Gun shot_6	18、	March1
798、	PiPa1_6	19、	March2
799、	PiPa2_6	20、	Rhumba1
	■ Song	21、	Rhumba1
0、	Beguineswing	22、	Slow1
1、	Beguine1	23、	Slow2
2、	Beguine2	24、	Discocha

# Digital Piano Handbook

666、	Luan_5	Organ 6	
667、	GuZhen_5	686、	Hammond Organ_6
668、	ErHu_5	687、	Percussive Organ_6
669、	Bandivc_5	688、	Rock Organ_6
Piano 6		689、	Church Organ_6
670、	Piano 1_6	690、	Reed Organ_6
671、	Piano 2_6	691、	Accordion_6
672、	Piano 3_6	692、	Harmonica_6
673、	Honky-Tonk Piano_6	693、	Bandoneon_6
674、	Rhodes Piano_6	Guitar 6	
675、	Chorused Piano_3	694、	Acoustic Guitar (nylon)_6
676、	Harpsichord_6	695、	Acoustic Guitar(steel)_6
677、	Clavinet_6	696、	Electric Guitar (jazz)_6
Percussion instrument 6		697、	Electric Guitar (clean)_6
678、	Celesta_6	698、	Electric Guitar (muted)_6
679、	Glockenspiel_6	699、	Overdriven Guitar_6
680、	Music Box_6	700、	Distortion Guitar_6
681、	Vibraphone_6	701、	Guitar Harmonics_6
682、	Marimba_6	Bass 6	
683、	Xylophone_6	702、	Acoustic Bass_6
684、	Tubular Bells_6	703、	Electric Bass(finger)_6
685、	Santur_6	704、	Electric Bass(pick)_6



# Digital Piano Handbook

705、	Fretless Bass_6	725、	Orchestra Hit_6
706、	Slap Bass 1_6	Brass Instrument 6	
707、	Slap Bass 2_6	726、	Trumpet_6
708、	Synth Bass 1_6	727、	Trombone_6
709、	Synth Bass 2_6	728、	Tuba_6
Solo strings 6		729、	Muted Trumpet_6
710、	Violin_6	730、	French Horn_6
711、	Viola_6	731、	Brass Section_6
712、	Cello_6	732、	Synth Brass 1_6
713、	Contrabass_6	733、	Synth Brass 2_6
714、	Tremolo Strings_6	Reeds instrument 6	
715、	Pizzicato Strings_6	734、	Soprano Sax_6
716、	Orchestral Harp_6	735、	Alto Sax_6
717、	Timpani	736、	Tenor Sax_6
Choral ensembles 6		737、	Baritone Sax_6
718、	String Ensemble 1_6	738、	Oboe_6
719、	String Ensemble 2_6	739、	English Horn_6
720、	SynthStrings 1_6	740、	Bassoon_6
721、	SynthStrings 2_6	741、	Clarinet_6
722、	Choir Aahs_6	Wind instrument 6	
723、	Voice Oohs_6	742、	Piccolo_6
724、	Synth Voice_6	743、	Flute_6

# Digital Piano Handbook

744、	Recorder_6	764、	Pad 7 (halo)_6
745、	Pan Flute_6	765、	Pad 8 (sweep)_6
746、	Bottle Blow_6	FX 6	
747、	Skakuhachi_6	766、	FX 1 (rain)_6
748、	Whistle_6	767、	FX 2 (soundtrack)_6
749、	Ocarina_6	768、	FX 3 (crystal)_6
Lead 6		769、	FX 4 (atmosphere)_6
750、	Lead 1 (square)_6	770、	FX 5 (brightness)_6
751、	Lead 2 (sawtooth)_6	771、	FX 6 (goblins)_6
752、	Lead 3 (calliope lead)_6	772、	FX 7 (echoes)_6
753、	Lead 4 (chiff lead)_6	773、	FX 8 (sci-fi)
754、	Lead 5 (charang)_6	National Instrument 6	
755、	Lead 6 (voice)_6	774、	Sitar_6
756、	Lead 7 (fifths)_6	775、	Banjo_6
757、	Lead 8 (bass+lead)_6	776、	Shamisen_6
Pad 6		777、	Koto_6
758、	Pad 1 (new age)_6	778、	alimba_6
759、	Pad 2 (warm)_6	779、	Bagpipe_6
760、	Pad 3 (polysynth)_6	780、	Fiddle_6
761、	Pad 4 (choir)_6	781、	Shanai_6
762、	Pad 5 (bowed)_6	Percussion 6	
763、	Pad 6 (metallic)_6	782、	Tinkle Bell_6