 


DIGITAL PIANO USER MANUAL

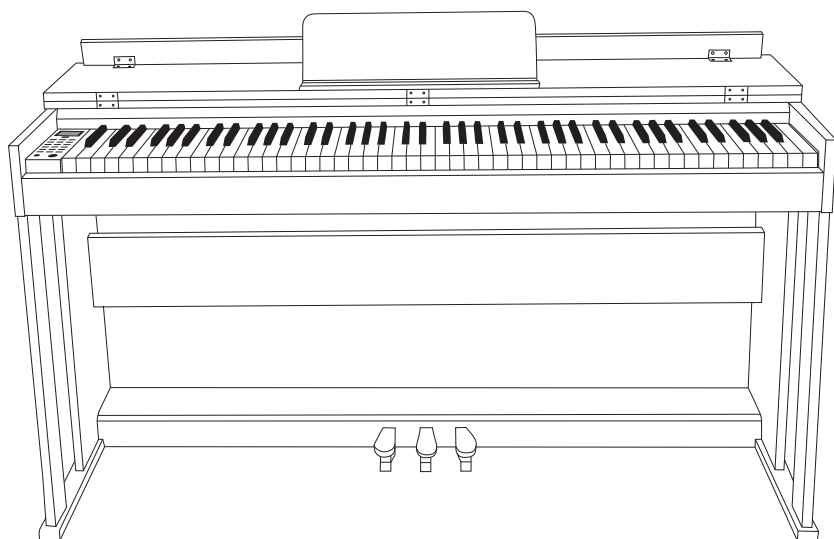

First connection of bluetooth, initial password: 8888



Function Introduction

Thank you for purchasing this digital piano from our company. This product is elegant and exquisite, and is a perfect combination of contemporary new electronic technology and traditional musical instruments.

- Before using this instrument, you must read this manual in detail.

Instrument Parameters

Keys: 88 keys with progressive weighting	Pitch: <3 cents
Range: A2~C5	Output power: >4Ω/20Wx2
Style: Upright piano	Power parameters: AC 100-240V~50/60HZ 1.5A DC 15V/3A

- Sound control, recording, playback
- Interface: USB, audio input, audio output (headphone output)
- Demo songs: 300
- Rhythms: 200
- Tone: 500
- 3 pedal functions
- Bluetooth dual-mode reception and transmission

Notice!

- This product is an electronic instrument product. It is a normal phenomenon that there is a little current sound in the loudspeaker or headset after being electrified.

Please stay away from all RF interference sources such as "radios, televisions, antenna receivers, routers, refrigerators, electrical appliances with motors, etc."



List


Function introduction	1
List	2
Installation guide	3
Panel illustration	4
Functional operation instructions	5
Tone table	7
Demo song	11
Rhythm table	14
Product maintenance	17
Safety precautions	18



Installation guide



 
Notice!

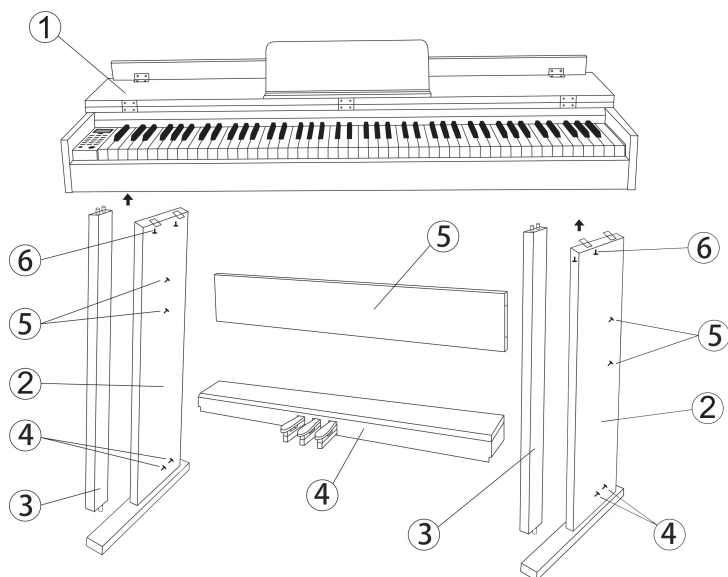- In order for you to use this equipment correctly, please install it according to the installation guide and carefully read the "Safety precautions" in the user's Manual before using it.
- This product needs to be installed by adults, do not let minors install independently!



 
- ① Piano cabinet
- ② Left/right foot assembly
- ③ Left/right straight leg support wooden plug 8MMx6PCS
- ④ Foot pedal assembly screws CM6x 60MM 4PCS
- ⑤ Back panel screws CA5x 50MM 4PCS
- ⑥ Plum screws M6x 12MM 4PCS

Screw diagram


-  ← ④ Screws CM6x 60MM 4PCS
-  ← ⑤ Screws CA5x 50MM 4PCS
-  ← ⑥ Plum screws M6x12MM 4PCS

Panel illustration

Function panel

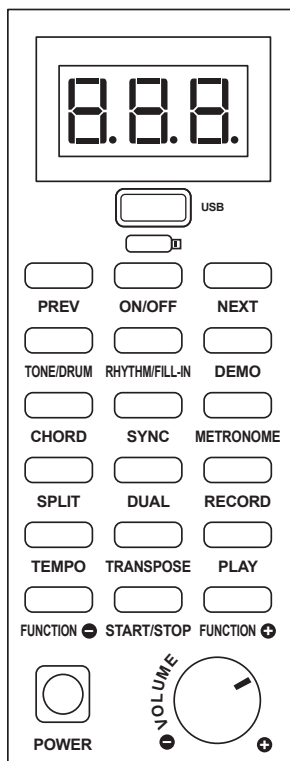

Jacks panel

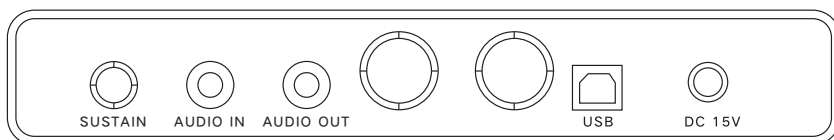 



Functional operation instructions

Functional operation instructions:

1. **【TONE/DRUM】** : The default tone selection is after power on. When playing, you can use the function **【FUNCTION+】** or function **【FUNCTION-】** key to select one of the 500 tones. Press and hold the **【TONE/DRUM】** key for 2 seconds and release it: the keyboard drum is turned on, and each key of the keyboard will correspond to a percussion sound effect. Press and hold the key again to turn off the keyboard drum mode and return to the tone adjustment mode.
2. **【RHYTHM/FILL-IN】** : Press the **【START/STOP】** key, and the default rhythm music will come out. When playing rhythm music, press the function **【FUNCTION+】** or function **【FUNCTION-】** key to select one of the 200 rhythms to play. To select the rhythm speed, press the **【TEMPO】** key, and then press the function **【FUNCTION+】** or **【FUNCTION-】** key to adjust the rhythm speed. Press **【START/STOP】** again to stop playing. When playing the rhythm, you can also press and hold the **【RHYTHM/FILL-IN】** key for 2 seconds and release it, and you will hear a short interlude insert drum music.
3. **【DEMO】** : Press the **【DEMO】** key to play the current song. You can also use the function **【FUNCTION+】** or **【FUNCTION-】** key to select one of the 300 songs in the song list. After the song is played, the next song will be played automatically. You should also press the key again to stop playing.
4. **【METRONOME】** : Press this key to turn on the metronome function, and you will hear the default beat. To change the beat, press and hold the key, and then use the function **【FUNCTION+】** or **【FUNCTION-】** key to change another beat. There are 4 beat options. When playing the beat, press the **【TEMPO】** key once, and then press the function **【FUNCTION+】** or **【FUNCTION-】** key to select the beat speed. Press this key to exit the beat mode.
5. **【SYNC】** : Press this key to turn on the synchronized mode. When pressing the keys in the A1~F#4 interval, the rhythm will start playing. Press the key again to exit the synchronized mode.
6. **【CHORD】** : Press this key to start the chord function. Press the A1~F#4 interval key to play the accompaniment chord music, and the chord tone changes with the pitch of the keys. Press this key again to exit the chord mode.
7. **【SPLIT】** : Press to start this function, and the keyboard will automatically be divided into two left and right keyboard timbres. The left keyboard is the string timbre, and the pitch of the first left key becomes A2. The scale timbre of the right keyboard remains unchanged, but other timbres can be selected through the timbre. Press again to exit this function.



Functional operation instructions

8. **【DUAL】** : Press to start this function, and then use the function **【FUNCTION+】** or **【FUNCTION-】** to select the second timbre of the keyboard. Then, when playing the keys, the timbre produced will have two timbres simultaneously. Press again to exit this function.
9. **【RECORD】** and **【PLAY】** : Press the Record button to enter the recording mode. After playing a song on the keyboard, press the Record button to exit the recording mode. Press the Play button again to play the song just recorded. Press the Record button for the third time to clear the previous recording and start a new recording.
10. **【TRANSCOPE】** : Press this button, and then use the **【FUNCTION+】** or **【FUNCTION-】** buttons to select the scale. There are 25 sections to choose from.
11. **【TEMPO】** : Press this button when playing the metronome or rhythm, and then use the **【FUNCTION+】** or **【FUNCTION-】** buttons to adjust the beat playback speed or rhythm playback speed.
12. **【START/STOP】** : Press this button to play the rhythm by default. To switch or stop other function modes, press this button again to stop.
13. USB DISK function: Directly plug in and unplug the USB flash drive to automatically play MP3 format songs. When playing a song, you can use the function to select **【PREV】** or **【NEXT】** to select a song to play. Long press the **【PREV】** or **【NEXT】** key to change the volume. Short press the **【ON/OFF】** key to pause or start. Long press **【ON/OFF】** to change the receiving Bluetooth mode.
14. Bluetooth function: The default Bluetooth audio/MIDI mode is turned on. Search the Bluetooth name to connect audio playback, or use Bluetooth connection to interact in the follow-up software APP.
15. Other functions:
 - Audio in: You can connect an external input sound source to amplify the sound in the piano;
 - Audio out: You can connect headphones or external audio equipment;
 - USB/MIDI: Download the APP follow-up software on a computer, tablet or mobile phone, and use a square port data cable to connect to interact;
 - Pedal function: Three-pedal. Sustain: Pressing the right sustain pedal will prolong the sound, pressing the sustained pedal will prolong the current sound, and pressing the weak sound will weaken the sound.



Appendix

Tone table		039	Synth Bass 1 1	078	hakahachi 1
001	Acoustic Grand Piano 1	040	Synth Bass 2 1	079	Whistle 1
002	Bright Acoustic Piano 1	041	Violin 1	080	Ocarina 1
003	Electric Grand Piano 1	042	Viola 1	081	Lead 1 (square) 1
004	Honky-tonk Piano 1	043	Cello 1	082	Lead 2 (sawtooth) 1
005	Rhodes Piano 1	044	Contrabass 1	083	Lead 3 (caliope lead) 1
006	Chorused Piano 1	045	Tremolo Strings 1	084	Lead 4 (chiff lead)
007	Harpichord 1	046	Pizzicato Strings 1	085	Lead 5 (charang) 1
008	Clavichord 1	047	Orchestral Harp 1	086	Lead 6 (voice) 1
009	Celesta 1	048	Timpani 1	087	Lead 7 (fifths) 1
010	Glockenspiel 1	049	String Ensemble 1 1	088	Lead 8 (bass+lead) 1
011	Music box 1	050	String Ensemble 2 1	089	Pad 1 (new age) 1
012	Vibraphone 1	051	Synth Strings 1 1	090	Pad 2 (warm) 1
013	Marimba 1	052	Synth Strings 2 1	091	Pad 3 (polysynth) 1
014	Xylophone 1	053	Choir Aahs 1	092	Pad 4 (choir) 1
015	Tubular Bells 1	054	Voice Oohs 1	093	Pad 5 (bowed) 1
016	Dulcimer 1	055	Synth Voice 1	094	Pad 6 (metallic) 1
017	Hammond Organ 1	056	Orchestra Hit 1	095	Pad 7 (halo) 1
018	Percussive Organ 1	057	Trumpet 1	096	Pad 8 (sweep) 1
019	Rock Organ 1	058	Trombone 1	097	FX 1 (rain) 1
020	Church Organ 1	059	Tuba 1	098	FX 2 (soundtrack) 1
021	Reed Organ 1	060	Muted Trumpet 1	099	FX 3 (crystal) 1
022	Accordian 1	061	French Horn 1	100	FX 4 (atmosphere) 1
023	Harmonica 1	062	Brass Section 1	101	FX 5 (brightness) 1
024	Tango Accordian 1	063	Synth Brass 1 1	102	FX 6 (goblins) 1
025	Acoustic Guitar (nylon) 1	064	Synth Brass 2 1	103	FX 7 (echoes) 1
026	Acoustic Guitar (steel) 1	065	Soprano Sax 1	104	FX 8 (sci-fi) 1
027	Electric Guitar (jazz) 1	066	Alto Sax 1	105	Sitar 1
028	Electric Guitar (clean) 1	067	Tenor Sax 1	106	Banjo 1
029	Electric Guitar (muted) 1	068	Baritone Sax 1	107	Shamisen 1
030	Overdriven Guitar 1	069	Oboe 1	108	Koto 1
031	Distortion Guitar 1	070	English Horn 1	109	Kalimba 1
032	Guitar Harmonics 1	071	Bassoon 1	110	Bagpipe 1
033	Acoustic Bass 1	072	Clarinet 1	111	Fiddle 1
034	Electric Bass(finger) 1	073	Piccolo 1	112	Shanai 1
035	Electric Bass (pick) 1	074	Flute 1	113	Tinkle Bell 1
036	Fretless Bass 1	075	Recorder 1	114	Agogo 1
037	Slap Bass 1 1	076	Pan Flute 1	115	Steel Drums 1
038	Slap Bass 2 1	077	Bottle Blow 1	116	Woodblock 1



Appendix

117	Taiko Drum 1	156	Electric Guitar (clean) 2	195	Tenor Sax 2
118	Melodic Tom 1	157	Electric Guitar (muted) 2	196	Baritone Sax 2
119	Synth Drum 1	158	Overdriven Guitar 2	197	Oboe 2
120	Reverse Cymbal 1	159	Distortion Guitar 2	198	English Horn 2
121	Guitar Fret Noise 1	160	Guitar Harmonics 2	199	Bassoon 2
122	Breath Noise 1	161	Acoustic Bass 2	200	Clarinet 2
123	Seashore 1	162	Electric Bass(finger) 2	201	Piccolo 2
124	Bird Tweet 1	163	Electric Bass (pick) 2	202	Flute 2
125	Telephone Ring 1	164	Fretless Bass 2	203	Recorder 2
126	Helicopter 1	165	Slap Bass 1 2	204	Pan Flute 2
127	Applause 1	166	Slap Bass 2 2	205	Bottle Blow 2
128	Gunshot 1	167	Synth Bass 1 2	206	haku-hachi 2
129	Acoustic Grand Piano 2	168	Synth Bass 2 2	207	Whistle 2
130	Bright Acoustic Piano 2	169	Violin 2	208	Ocarina 2
131	Electric Grand Piano 2	170	Viola 2	209	Lead 1 (square) 2
132	Honky-tonk Piano 2	171	Cello 2	210	Lead 2 (sawtooth) 2
133	Rhodes Piano 2	172	Contrabass 2	211	Lead 3 (caliope lead) 2
134	Chorused Piano 2	173	Tremolo Strings 2	212	Lead 5 (chiff lead)
135	Harpichord 2	174	Pizzicato Strings 2	213	Lead 5 (charang) 2
136	Clavichord 2	175	Orchestral Harp 2	214	Lead 6 (voice) 2
137	Celesta 2	176	Timpani 2	215	Lead 7 (fifths) 2
138	Glockenspiel 2	177	String Ensemble 1 2	216	Lead 8 (bass+lead) 2
139	Music box 2	178	String Ensemble 2 2	217	Pad 1 (new age) 2
140	Vibraphone 2	179	Synth Strings 1 2	218	Pad 2 (warm) 2
141	Marimba 2	180	Synth Strings 2 2	219	Pad 3 (polysynth) 2
142	Xylophone 2	181	Choir Aahs 2	220	Pad 4 (choir) 2
143	Tubular Bells 2	182	Voice Oohs 2	221	Pad 5 (bowed) 2
144	Dulcimer 2	183	Synth Voice 2	222	Pad 6 (metallic) 2
145	Hammond Organ 2	184	Orchestra Hit 2	223	Pad 7 (halo) 2
146	Percussive Organ 2	185	Trumpet 2	224	Pad 8 (sweep) 2
147	Rock Organ 2	186	Trombone 2	225	FX 1 (rain) 2
148	Church Organ 2	187	Tuba 2	226	FX 2 (soundtrack) 2
149	Reed Organ 2	188	Muted Trumpet 2	227	FX 3 (crystal) 2
150	Accordian 2	189	French Horn 2	228	FX 4 (atmosphere) 2
151	Harmonica 2	190	Brass Section 2	229	FX 5 (brightness) 2
152	Tango Accordian 2	191	Synth Brass 1 2	230	FX 6 (goblins) 2
153	Acoustic Guitar (nylon) 2	192	Synth Brass 2 2	231	FX 7 (echoes) 2
154	Acoustic Guitar (steel) 2	193	Soprano Sax 2	232	FX 8 (sci-fi) 2
155	Electric Guitar (jazz) 2	194	Alto Sax 2	233	Sitar 2



Appendix

234	Banjo 2	273	Hammond Organ 3	312	Orchestra Hit 3
235	Shamisen 2	274	Percussive Organ 3	313	Trumpet 3
236	Koto 2	275	Rock Organ 3	314	Trombone 3
237	Kalimba 2	276	Church Organ 3	315	Tuba 3
238	Bagpipe 2	277	Reed Organ 3	316	Muted Trumpet 3
239	Fiddle 2	278	Accordion 3	317	French Horn 3
240	Shanai 2	279	Harmonica 3	318	Brass Section 3
241	Tinkle Bell 2	280	Tango Accordion 3	319	Synth Brass 1 3
242	Agogo 2	281	Acoustic Guitar (nylon) 3	320	Synth Brass 2 3
243	Steel Drums 2	282	Acoustic Guitar (steel) 3	321	Soprano Sax 3
244	Woodblock 2	283	Electric Guitar (jazz) 3	322	Alto Sax 3
245	Taiko Drum 2	284	Electric Guitar (clean) 3	323	Tenor Sax 3
246	Melodic Tom 2	285	Electric Guitar (muted) 3	324	Baritone Sax 3
247	Synth Drum 2	286	Overdriven Guitar 3	325	Oboe 3
248	Reverse Cymbal 2	287	Distortion Guitar 3	326	English Horn 3
249	Guitar Fret Noise 2	288	Guitar Harmonics 3	327	Bassoon 3
250	Breath Noise 2	289	Acoustic Bass 3	328	Clarinet 3
251	Seashore 2	290	Electric Bass(finger) 3	329	Piccolo 3
252	Bird Tweet 2	291	Electric Bass (pick) 3	330	Flute 3
253	Telephone Ring 2	292	Fretless Bass 3	331	Recorder 3
254	Helicopter 2	293	Slap Bass 1 3	332	Pan Flute 3
255	Applause 2	294	Slap Bass 2 3	333	Bottle Blow 3
256	Gunshot 2	295	Synth Bass 1 3	334	haku-hachi 3
257	Acoustic Grand Piano 3	296	Synth Bass 2 3	335	Whistle 3
258	Bright Acoustic Piano 3	297	Violin 3	336	Ocarina 3
259	Electric Grand Piano 3	298	Viola 3	337	Lead 1 (square) 3
260	Honky-tonk Piano 3	299	Cello 3	338	Lead 2 (sawtooth) 3
261	Rhodes Piano 3	300	Contrabass 3	339	Lead 3 (caliope lead) 3
262	Chorused Piano 3	301	Tremolo Strings 3	340	Lead 6 (chiff lead)
263	Harpsichord 3	302	Pizzicato Strings 3	341	Lead 5 (charang) 3
264	Clavichord 3	303	Orchestral Harp 3	342	Lead 6 (voice) 3
265	Celesta 3	304	Timpani 3	343	Lead 7 (fifths) 3
266	Glockenspiel 3	305	String Ensemble 1 3	344	Lead 8 (bass+lead) 3
267	Music box 3	306	String Ensemble 2 3	345	Pad 1 (new age) 3
268	Vibraphone 3	307	Synth Strings 1 3	346	Pad 2 (warm) 3
269	Marimba 3	308	Synth Strings 2 3	347	Pad 3 (polysynth) 3
270	Xylophone 3	309	Choir Aahs 3	348	Pad 4 (choir) 3
271	Tubular Bells 3	310	Voice Oohs 3	349	Pad 5 (bowed) 3
272	Dulcimer 3	311	Synth Voice 3	350	Pad 6 (metallic) 3



Appendix

351	Pad 7 (halo) 3	390	Chorused Piano 4	429	Tremolo Strings 4
352	Pad 8 (sweep) 3	391	Harpsichord 4	430	Pizzicato Strings 4
353	FX 1 (rain) 3	392	Clavichord 4	431	Orchestral Harp 4
354	FX 2 (soundtrack) 3	393	Celesta 4	432	Timpani 4
355	FX 3 (crystal) 3	394	Glockenspiel 4	433	String Ensemble 1 4
356	FX 4 (atmosphere) 3	395	Music box 4	434	String Ensemble 2 4
357	FX 5 (brightness) 3	396	Vibraphone 4	435	Synth Strings 1 4
358	FX 6 (goblins) 3	397	Marimba 4	436	Synth Strings 2 4
359	FX 7 (echoes) 3	398	Xylophone 4	437	Choir Aahs 4
360	FX 8 (sci-fi) 3	399	Tubular Bells 4	438	Voice Oohs 4
361	Sitar 3	400	Dulcimer 4	439	Synth Voice 4
362	Banjo 3	401	Hammond Organ 4	440	Orchestra Hit 4
363	Shamisen 3	402	Percussive Organ 4	441	Trumpet 4
364	Koto 3	403	Rock Organ 4	442	Trombone 4
365	Kalimba 3	404	Church Organ 4	443	Tuba 4
366	Bagpipe 3	405	Reed Organ 4	444	Muted Trumpet 4
367	Fiddle 3	406	Accordion 4	445	French Horn 4
368	Shanai 3	407	Harmonica 4	446	Brass Section 4
369	Tinkle Bell 3	408	Tango Accordion 4	447	Synth Brass 1 4
370	Agogo 3	409	Acoustic Guitar (nylon) 4	448	Synth Brass 2 4
371	Steel Drums 3	410	Acoustic Guitar (steel) 4	449	Soprano Sax 4
372	Woodblock 3	411	Electric Guitar (jazz) 4	450	Alto Sax 4
373	Taiko Drum 3	412	Electric Guitar (clean) 4	451	Tenor Sax 4
374	Melodic Tom 3	413	Electric Guitar (muted) 4	452	Baritone Sax 4
375	Synth Drum 3	414	Overdriven Guitar 4	453	Oboe 4
376	Reverse Cymbal 3	415	Distortion Guitar 4	454	English Horn 4
377	Guitar Fret Noise 3	416	Guitar Harmonics 4	455	Bassoon 4
378	Breath Noise 3	417	Acoustic Bass 4	456	Clarinet 4
379	Seashore 3	418	Electric Bass (finger) 4	457	Piccolo 4
380	Bird Tweet 3	419	Electric Bass (pick) 4	458	Flute 4
381	Telephone Ring 3	420	Fretless Bass 4	459	Recorder 4
382	Helicopter 3	421	Slap Bass 1 4	460	Pan Flute 4
383	Applause 3	422	Slap Bass 2 4	461	Bottle Blow 4
384	Gunshot 3	423	Synth Bass 1 4	462	haku-hachi 4
385	Acoustic Grand Piano 4	424	Synth Bass 2 4	463	Whistle 4
386	Bright Acoustic Piano 4	425	Violin 4	464	Ocarina 4
387	Electric Grand Piano 4	426	Viola 4	465	Lead 1 (square) 4
388	Honky-tonk Piano 4	427	Cello 4	466	Lead 2 (sawtooth) 4
389	Rhodes Piano 4	428	Contrabass 4	467	Lead 3 (caliope lead) 4



Appendix

468	Lead 7 (chiff lead)	6	let's row our boats	45	London Bridge
469	Lead 5 (charang) 4	7	flower fairy	46	Look At All The Colors I Can See
470	Lead 6 (voice) 4	8	William Tell Overture	47	Menuetto
471	Lead 7 (fifths) 4	9	The Blue Danube	48	Bingo
472	Lead 8 (bass+lead) 4	10	The sound of snow falling	49	Spanish Bullfighter March
473	Pad 1 (new age) 4	11	childhood	50	Prelude(Wohltemperierte Klavier 1-1)
474	Pad 2 (warm) 4	12	Love And Passion	51	six little ducks
475	Pad 3 (polysynth) 4	13	Little Star	52	romance de amor
476	Pad 4 (choir) 4	14	Cannon	53	dance of fireflies
477	Pad 5 (bowed) 4	15	Skip to my lou	54	Riding on the wings of that singing voice
478	Pad 6 (metallic) 4	16	US Patrol Troops	55	The Maiden's Prayer
479	Pad 7 (halo) 4	17	Turkey In the Straw	56	The Entertainer
480	Pad 8 (sweep) 4	18	Yankee doodle	57	Premiere arabesque
481	FX 1 (rain) 4	19	Many years ago	58	Aura Lee
482	FX 2 (soundtrack) 4	20	Mary Had A Little Lamb	59	Honky-Tonk
483	FX 3 (crystal) 4	21	Old_Black_Joe	60	La Viollette
484	FX 4 (atmosphere) 4	22	Romeo and Juliet	61	Claire De Lune
485	FX 5 (brightness) 4	23	Two tigers	62	Chopin Nocturne Op.9
486	FX 6 (goblins) 4	24	My_Bonnie	63	Melody F
487	FX 7 (echoes) 4	25	Row, Row, Row Your Boat	64	Rondo K.V.485
488	FX 8 (sci-fi) 4	26	Christmas song	65	Tango Espana
489	Sitar 4	27	Happy Clapping Song	66	LiebesträumeNr.3
490	Banjo 4	28	jingle bells	67	Londonderry Air
491	Shamisen 4	29	Croatian Rhapsody	68	Green sleeves
492	Koto 4	30	Above the Moon	69	Souvenir De Moscou op.6
493	Kalimba 4	31	The Song of Leo	70	Leggenda Valacca
494	Bagpipe 4	32	Sha Bao	71	Wild bees fluttering and dancing
495	Fiddle 4	33	It's a small world	72	March in D
496	Shanai 4	34	Moonlight over the lotus pond	73	To a Wild Rose
497	Tinkle Bell 4	35	Hongyan	74	Cherni 599-001
498	Agogo 4	36	Mozart's Symphony No. 40	75	Chelny 599-002
499	Steel Drums 4	37	Rock A ByeBaby	76	Cherni 599-003
500	Woodblock 4	38	Red River Valley	77	Cherni 599-004
Demo song		39	Clarinet Polka	78	Chelny 599-005
1	Dreams	40	Mr. Wang has a piece of land	79	Cherni 599-006
2	The imprint of rain	41	The wheels ong the bus	80	Cherni 599-007
3	Arabic Style Song No.1	42	Carmen	81	Chelny 599-008
4	Tragic Sonata, Third Movement	43	Apple Round,Apple Red	82	Cherni 599-009
5	For Alice	44	Little bee	83	Chelny 599-010



Appendix

84	Chelny 599-011	123	Hanon Basic Exercise 2	162	Bach_C
85	Chelny 599-012	124	Hanon Basic Exercise 3	163	Bach_Aria on the G String
86	Chelny 599-013	125	Hanon Basic Exercise 4	164	Bach_Vocal Exercise in C minor
87	Chelny 599-014	126	Hanon Basic Exercise 5	165	Bach_Two-part Invention
88	Chelny 599-015	127	Hanon Basic Exercise 6	166	Bach_Gavotte
89	Chelny 599-016	128	Hanon Basic Exercise 7	167	Bach_Ave Maria
90	Chelny 599-017	129	Hanon Basic Exercise 8	168	Bach_Vegas
91	Chelny 599-018	130	Hanon Basic Exercise 9	169	Bach_Minuet
92	Chelny 599-019	131	Hanon Basic Exercise 10	170	Bach_Cancan
93	Chelny 599-020	132	Hanon Basic Exercise 11	171	Bach_Toccat
94	Chelny 599-021	133	Hanon Basic Exercise 12	172	Bach_Polonaise
95	Chelny 599-022	134	Hanon Basic Exercise 13	173	Bach_The Joy of the World's Hope
96	Spring has arrived	135	Hanon Basic Exercise 14	174	Bach_Sarabande
97	Fishing Song	136	Hanon Basic Exercise 15	175	Bach_Scherzo
98	Lulala	137	Hanon Basic Exercise 16	176	Bach_March
99	Big chubby idiot	138	Hanon Basic Exercise 17	177	Burgmuller_Angel's Song
100	Little White Boat	139	Hanon Basic Exercise 18	178	Burgmuller_Tarantella
101	Kabuli bird	140	Hanon Basic Exercise 19	179	Burgmuller_Innocence
102	Find friends	141	Hanon Basic Exercise 20	180	Burgmuller_Clear Stream
103	Our village	142	Hanon Basic Exercise 21	181	Burgmuller_Arabic Style
104	Readboy	143	Hanon Basic Exercise 22	182	Cuckoo Clock
105	Rainbow Sister	144	Hanon Basic Exercise 23	183	Cuckoo Bird
106	Old Black Lord	145	Hanon Basic Exercise 24	184	Star of Hope
107	Beautiful river	146	Hanon Basic Exercise 25	185	Kurau_Sonata
108	Manka Bay Thoreau	147	Hanon Basic Exercise 26	186	Happy Clown
109	Mission Impossible	148	Hanon Basic Exercise 27	187	Merry-Go-Round
110	Kakurenbo	149	Hanon Basic Exercise 28	188	Spring Song
111	One Sugar Song	150	Hanon Basic Exercise 29	189	The Man in the Moon
112	Go! Blue Team!	151	Hanon Basic Exercise 30	190	Singing Mouse
113	traffic police	152	Hanon Basic Exercise 31	191	Folk Music_Yimeng Mountain Minor
114	Lyre	153	woodpecker	192	Folk Music_A Shoulder Pole
115	Asgard	154	The rushing river	193	Folk Music_Sanshilipu
116	Chord Game	155	Waltz	194	Folk Music_The Sun Rises from the East China Sea
117	Cramer Etudes No.1	156	Bach_Bray Dance in E minor	195	Folk Music_You Give Me a Rose
118	Cramer Etudes No.23	157	Bach_Well-Tempered Clavier	196	Folk Music_Farmer Hunting Rabbits
119	Cramer Etudes No.24	158	Bach_Bagpipe Dance in D major	197	Folk Music_Half Moon Climbs Up
120	Cramer Etudes No.35	159	Bach_Prelude in E major	198	Folk Music_Ding Ding Dong
121	Sonatina No.1 in C major Op.36	160	Bach_Fugue in G minor	199	Folk Music_Ding Ding Yueqin
122	Hanon Basic Exercise 1	161	Bach_Goldberg Variations	200	Folk music_By the Hanas Lake



Appendix

201	Folk music_Under the silver moonlight	240	Colorful clouds chasing the moon	279	Beyer etude 37
202	Folk music_Meng Jiangnu	241	Birds paying homage to the phoenix	280	Beyer etude 38
203	Folk music_Little New Year greetings	242	Birds paying homage to the phoenix	281	Beyer etude 39
204	Folk music_Little backpack	243	Birds' birthday cake	282	Beyer etude 40
205	Folk music_Little frog	244	Knowledge The Watcher	283	Beyer etude 41
206	Folk music_Folk song	245	The Knife Sharpener	284	Party
207	Folk music_Young friends	246	Beyer Etude 1	285	To Celia
208	Folk music_Young friends come to meet	247	Beyer Etude 3	286	Dutch Dance
209	Folk music_Happy flowers bloom	248	Beyer Etude 5	287	Mozart_Sonata in C major
210	Folk music_My flowers	249	Beyer Etude 6	288	Mozart's melody
211	Folk music_Lift your veil	250	Beyer Etude 7	289	Falling leaves
212	Folk music_Cowherding folk song	251	Beyer Etude 8	290	Spanish festival
213	Folk music_Orange tree blossoms	252	Beyer Etude 9	291	Stepping stones
214	Folk music_Make-up tune	253	Beyer Etude 10	292	Bells
215	Folk music_The sound of spring water	254	Beyer Etude 11	293	Sleigh
216	Folk music_Liuyang River	255	Beyer Etude 12	294	Musical steps
217	Folk music_Shepherdess	256	Beyer Etude 13	295	Sound garden
218	Folk music_The fields are quiet	257	Beyer Etude 14	296	Knight and lady
219	Folk music_Embroidered purse	258	Beyer Etude 15	297	Selling dumplings
220	Folk music_Beautiful girl	259	Beyer Etude 16	298	Gaorita
221	Folk music_My home on the beautiful grassland	260	Beyer Etude 17	299	Lanterns
222	Folk music_Flower toad	261	Beyer Etude 18	300	Wandering around lanterns
223	Folk music_Night outside Moscow	262	Beyer Etude 19		
224	Folk music_Horse racing	263	Beyer Etude 20		
225	Folk music_Hot girl	264	Beyer Etude 21		
226	Folk music_Send Qilin	265	Beyer etude 23		
227	Folk music_Avazhiguli	266	Beyer etude 24		
228	Folk music_Arirang	267	Beyer etude 25		
229	Folk music_Snow-white clouds	268	Beyer etude 26		
230	Folk music_Malan flowers bloom	269	Beyer etude 27		
231	Folk music_Lantern tune	270	Beyer etude 28		
232	Folk music_Snowflakes on the plateau	271	Beyer etude 29		
233	Folk music_The long Yalu River	272	Beyer etude 30		
234	Folk music_Sparrow tune	273	Beyer etude 31		
235	Swans on the lake	274	Beyer etude 32		
236	People making popcorn	275	Beyer etude 33		
237	Climbing the city wall	276	Beyer etude 34		
238	Hunting song	277	Beyer etude 35		
239	Owl's problem	278	Beyer etude 36		



Appendix

Rhythm table				
Country	001	Country 16T	039	Vintage Jazz
	002	Country Ballad	040	A New Start
	003	Country Shuffle	041	Accelerate
	004	Dream Shuffle	042	Ballad
	005	Dream Shuffle Waltz	043	Coulombs
	006	Fast Beat	044	Drive
	007	Fast Shuffle	045	Feel
	008	HI Shuffle	046	Epiano
	009	Quick Beat	047	Fast Pop
	010	Quick Shuffle	048	GoodTime
	011	Blue Grass Shuffle	049	Move On
	012	Slow Pure	050	Mystic Ballad
	013	The Village	051	Piano Ballad
	014	Unplugged 16T	052	Piano Energy
	015	Blue Grass	053	Piano Peace
	016	ballad 16T	054	Pop Hit
Jazz/Blues	017	Bossa Jazz	055	Pop Pad
	018	Bossa Jazz Pad	056	Relaxed
	019	Even Blue	057	Relaxed Waltz
	020	Even Blue B	058	Sentiment
	021	Even Jazz	059	Simple Way
	022	Flow Shuffle	060	Slow Ballad
	023	Fusion Shuffle	061	Smooth Beat
	024	Happy Blues	062	Snake Base
	025	Jazz Ballad	063	Toms
	026	Jazz Waltz	064	Toms B
	027	Jazz Latin Fusion	065	True Ballad
	028	Old Blues	066	True Ballad Waltz
	029	Piano Blues	067	Two Guitars
	030	Quick Swing	068	Toms C
	031	Slow Blues	069	Unwind
	032	Stiff shuffle	070	Airy Rock
	033	Vintage Jazz B	071	Bass Up
	034	Swing Pad	072	Dirty Shuffle
	035	Swing	073	Flat Rock
	036	Swing2	074	Flow Rock
	037	Swing Pad3_4	075	Ground State
	038	Tale Swing	076	Heart Rock
		077	Light Rock	



Appendix

ROCK	078	Old Rock Ballad	World	117	Bossa Jazz 2
	079	Quarter Rock		118	Bossa Jazz Pad 2
	080	Rock Base		119	Even Blue 2
	081	Rock Base B		120	Even Blue B 2
	082	Rock Base C		121	Even Jazz 2
	083	Rock Base D		122	Flow Shuffle 2
	084	Rock Base E		123	Fusion Shuffle 2
	085	Rock Base F		124	Happy Blues 2
	086	Rock Roll		125	Jazz Ballad 2
	087	Rock Run		126	Jazz Waltz 2
	088	Rock Tain		127	Jazz Latin Fusion 2
	089	Shuffle		128	Old Blues 2
	090	Shuffle Waltz		129	Piano Blues 2
	091	Slow Rock		130	Quick Swing 2
	092	Slow Rock9_8		131	Slow Blues 2
	093	Square Beat		132	Stiff shuffle 2
	094	Steady Beat		133	Vintage Jazz B 2
	095	Sustain		134	Swing Pad 2
	096	Toms Rock		135	Swing 2
097	Twist	136	Swing2 2		
World	098	Bossa Nova	137	Swing Pad3_4 2	
	099	Chacha	138	Tale Swing 2	
	100	bossa Waltz	139	Vintage Jazz 2	
	101	Country 16T 2	140	A New Start 2	
	102	Country Ballad 2	141	Accelerate 2	
	103	Country Shuffle 2	142	Ballad 2	
	104	Dream Shuffle 2	143	Coulombs 2	
	105	Dream Shuffle Waltz 2	144	Drive 2	
	106	Fast Beat 2	145	Feel 2	
	107	Fast Shuffle 2	146	Epiano 2	
	108	HI Shuffle 2	147	Fast Pop 2	
	109	Quick Beat 2	148	GoodTime 2	
	110	Quick Shuffle 2	149	Move On 2	
	111	Blue Grass Shuffle 2	150	Mystic Ballad 2	
	112	Slow Pure 2	151	Piano Ballad 2	
	113	The Village 2	152	Piano Energy 2	
	114	Unplugged 16T 2	153	Piano Peace 2	
	115	Blue Grass 2	154	Pop Hit 2	
	116	ballad 16T 2	155	Pop Pad 2	



Appendix

World	156	Relaxed 2	World	195	Sustain 2
	157	Relaxed Waltz 2		196	Toms Rock 2
	158	Sentiment 2		197	Twist 2
	159	Simple Way 2		198	Bossa Nova 2
	160	Slow Ballad 2		199	Chacha 2
	161	Smooth Beat 2		200	bossa Waltz 2
	162	Snake Base 2			
	163	Toms 2			
	164	Toms B 2			
	165	True Ballad 2			
	166	True Ballad Waltz 2			
	167	Two Guitars 2			
	168	Toms C 2			
	169	Unwind 2			
	170	Airy Rock 2			
	171	Bass Up 2			
	172	Dirty Shuffle 2			
	173	Flat Rock 2			
	174	Flow Rock 2			
	175	Ground State 2			
	176	Heart Rock 2			
	177	Light Rock 2			
	178	Old Rock Ballad 2			
	179	Quarter Rock 2			
	180	Rock Base 2			
	181	Rock Base B 2			
	182	Rock Base C 2			
	183	Rock Base D 2			
	184	Rock Base E 2			
	185	Rock Base F 2			
	186	Rock Roll 2			
	187	Rock Run 2			
188	Rock Tain 2				
189	Shuffle 2				
190	Shuffle Waltz 2				
191	Slow Rock 2				
192	Slow Rock9_8 2				
193	Square Beat 2				
194	Steady Beat 2				



Product Care

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing failure.

1 AVOID HEATING,DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight or place it near air condition or extremely hot place.

2 DO NOT USE NEAR THE TV OR RADIO.

This product may cause video or audio interference to the reception of TV and radio. If this happens,the product should be removed from the TV or radio.

3 NO PAINT,DILUENT OR SIMILAR CHEMICALS SHALL BE USED FOR CLEANING.

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4 DO NOT SHAKE,AVOID COLLISION

When moving,the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

 


Safety Precautions

POWER SUPPLY

This product can be powered by standard indoor wall sockets.Please only use the power cord specified in this product.When not in use,please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

110-240V AC outlet

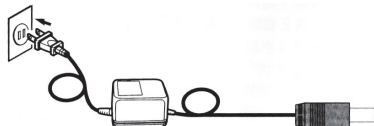

MARKING MAP

To ensure that you use this product safely and correctly,to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs.The various signs and their meanings are as follows:

WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO

This triangle sign(Δ)indicates what users should pay attention to.(The left picture shows a cautious electric shock)
A circular sign(C)with an oblique line indicates prohibitions.The icons in or beside the logo indicate the contents specifically prohibited.(No disassembly is allowed on the left)

Black dots(·)indicate what must be observed.The diagrams in this sign indicate the contents of the specific matters that must be observed.(The left picture shows that the power plug must be pulled out of the socket)



Safety Precautions



Warn

Smoke, odor, overheating

When the product emits smoke, smells, or is overheated, continued use may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. Unplug the plug from the power socket.
3. Contact your dealer.

Power cable

Improper use of the power cord may cause fire and electric shock hazards. The following precautions must be observed.

You must use the power cord specified for this product.

You must use an AC power source whose output voltage is within the rated voltage range for household use.

Do not overload the power outlet or power extension cord.

Improper handling of the power cord may result in damage or breakage, resulting in fire and electric shock hazards. The following precautions must be observed.

Do not place heavy objects on the power cord or expose it to heat.

Do not attempt to modify or bend the power cord excessively.

Do not twist or pull on the power cord.

If the power cord or plug is damaged, replace the power cord with the same specification and type.

Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock.

Use the power cord in a place where water will not splash. Water poses a risk of fire and electric shock.

Do not place a vase or any other container of water on this product. Water poses a risk of fire and electric shock.

Do not allow minors to unplug or touch the power cord or connection board, as minors do not have the knowledge of electricity safety and there is a risk of electric shock.



Notice

Improper use of the power cord may cause fire and electric shock hazards. The following precautions must be observed.

Do not place the power cord near a stove or other heat source.

Do not pull on the power cord when unplugging it from the electrical outlet. The plug body must be grasped.

The power cord plug must be inserted all the way into the power socket.

Make sure the power is off before connecting or disconnecting the power cord.

Unplug the power cord from the wall outlet during a thunderstorm or before going on a trip or other extended absence.

At least once a year, unplug the power cord from the wall outlet and clean away any accumulated dust from around the plug.





Sicherheitsvorkehrungen

Entsorgen Sie dieses Produkt nicht



Legen Sie dieses Produkt niemals ins Feuer. Sonst wird es so sein
Verursacht Verbrennungen von Holzprodukten und deren internen elektronischen Bauteilen
Das Produkt kann explodieren und die Gefahr von Bränden und Verletzungen verursachen.

Wasser und Fremdkörper



Wasser, andere Flüssigkeiten und (Metallteile usw.) gelangen hinein.
Bei diesem Produkt besteht Brand- und Stromschlaggefahr. aus
Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel zur Stromversorgung verwenden Um es mit Strom zu versorgen, schließen Sie es an die Steckdose an Ziehen Sie den Stecker heraus.
3. Kontaktieren Sie Ihren Händler

Demontage und Neuaufbau



Zerlegen Sie dieses Produkt niemals in irgendeiner Weise seine Transformation. Andernfalls kann es zu Stromschlägen, Verbrennungen oder Ähnlichem kommen
Es besteht die Gefahr von Personenschäden. Alle internen Inspektionen sollten durchgeführt werden
Überlassen Sie Inspektion, Einstellung und Wartung Ihrem Händler.

Fallengelassen oder getroffen werden



Dieses Produkt wurde fallen gelassen oder starken Stößen ausgesetzt. Die weitere Verwendung nach einer Beschädigung kann zu Brand- und Stromschlaggefahr führen. Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel verwenden Strom, schließen Sie die Steck es aus.
3. Kontaktieren Sie Ihren Händler.

Plastiktüte



Erlauben Sie niemandem, die Plastikverpackung zu entfernen, in der dieses Produkt verpackt ist. Legen Sie den Stoffbeutel auf Ihren Kopf oder stecken Sie ihn in den Mund, da es sonst zu Verletzungen kommen kann Ersttickungsgefahr: Familien mit kleinen Kindern sollten sich besonders bewusst sein.
Halten Sie Abstand zu diesem Produkt und stehen Sie auf

Das Hochklettern des



Instrumentenkörpers oder seines Ständers kann dazu führen, dass es umkippt oder Familien mit kleinen Kindern sollten besonders auf das Schadensrisiko achten.

Ort



Stellen Sie dieses Produkt nicht auf unebenen Oberflächen auf Oberfläche oder einem anderen instabilen Ort. Sonst wird es so sein
Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Produktbewegung



Bevor Sie dieses Produkt bewegen, müssen Sie es zunächst von der Wand entfernen Ziehen Sie das Netzkabel aus der Steckdose und ziehen Sie alle anderen Geräte ab Kabel und Verbindungsdrähte. Andernfalls kann die Leitung beschädigt werden, was zur Folge hat Brand- und Stromschlaggefahr.

Sauber



Bevor Sie dieses Produkt reinigen, müssen Sie es zuerst entfernen Ziehen Sie das Netzkabel aus der Steckdose, da es sonst zu einem Brand kommen kann Es besteht Katastrophen- und Stromschlaggefahr.

Schnittstelle



An die Schnittstelle dieses Produkts können nur bestimmte Geräte angeschlossen werden. Ausrüstung und Geräte. Der Anschluss unbeabsichtigter Geräte oder Geräte kann zu Problemen führen kann zu Bränden und Stromschlägen führen.

Standortauswahl



Stellen Sie dieses Produkt nicht an den folgenden Orten auf. NEIN Es besteht Brand- und Stromschlaggefahr.
Orte mit hoher Temperatur oder Staub.
Küche oder andere Orte mit Dämpfen.
Orte mit direkter Sonneneinstrahlung oder anderen Orten Wo dieses Produkt hohe Temperaturen erzeugt.

Volumen



Spielen Sie Musik niemals über einen längeren Zeitraum mit hoher Lautstärke ab. verwenden
Seien Sie besonders vorsichtig, wenn Sie Kopfhörer verwenden, da eine zu hohe Lautstärke Ihr Gehör schädigen kann.

Schwere Gegenstände



Stellen Sie niemals schwere Gegenstände auf dieses Produkt. Andernfalls wird das Produkt beschädigt Die Oberseite des Produkts ist zu schwer, sodass das Produkt umkippt oder auf Gegenstände fällt. Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Fachgerechte Montage des Ständers



Eine unsachgemäße Montage des Ständers kann zum Umkippen des Produkts führen Beim Herunterfallen des Produkts besteht Verletzungsgefahr. Deshalb muss es Um dies zu gewährleisten, muss der Zusammenbau gemäß den Anweisungen im beiliegenden Handbuch erfolgen Es wird garantiert, dass dieses Produkt ordnungsgemäß in seiner Halterung installiert ist.

Sicherungswechsel



Wenn die Sicherung durchbrennt, liegt möglicherweise ein Kurzschluss im Inneren des Produkts vor. Bei Störungen im Stromkreis oder bei Spannungsinstabilität ist es notwendig, einen Fachmann zu konsultieren Identifizieren und ersetzen Sie es, andernfalls besteht Brand- und Stromschlaggefahr.



Précautions de sécurité

Ne jetez pas ce produit



Ne placez jamais ce produit au feu. Sinon ce sera Provoque la combustion des produits en bois et de leurs composants électroniques internes
Le produit peut exploser, entraînant un risque d'incendie et de blessures.

Eau et corps étrangers



De l'eau, d'autres liquides et (morceaux métalliques, etc.) entrent Ce produit présente un risque d'incendie et de choc électrique. dehors Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour alimenter l'alimentation, branchez-le à la prise murale Débrancher.
3. Contactez votre revendeur

Démantèlement et reconstruction



Ne démontez jamais ce produit de quelque manière que ce soit ou sa transformation. Sinon, un choc électrique, des brûlures ou autres Cela risque de provoquer des blessures. Toutes les inspections internes doivent être Confiées l'inspection, le réglage et l'entretien à votre revendeur.

Tombé ou frappé



Ce produit est tombé ou a été soumis à un fort impact. Continuer à l'utiliser après un dommage peut entraîner des risques d'incendie et de choc électrique. Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour l'alimentation, connectez le Débranchez-le.
3. Contactez votre revendeur.

Sac plastique



Ne laissez jamais personne retirer l'emballage en plastique utilisé pour emballer ce produit. Mettez le sac de matériel sur votre tête ou mettez-le dans votre bouche, sinon cela pourrait provoquer Risques d'étouffement Les familles avec de jeunes enfants doivent être particulièrement vigilantes
Gardez vos distances avec ce produit et tenez-vous debout

Grimper sur le corps de



l'instrument ou sur son support peut le faire basculer ou Les familles avec de jeunes enfants doivent accorder une attention particulière aux risques de dommages.

Lieu



Évitez de placer ce produit sur des surfaces inégales surface ou tout autre endroit instable. Sinon ce sera Si le produit tombe, il existe un risque de

Mouvement du produit



Avant de déplacer ce produit, vous devez d'abord le retirer du mur Débranchez le cordon d'alimentation de la prise électrique et débranchez tous les autres Câbles et fils de connexion. Sinon, la ligne pourrait être endommagée, ce qui entraînerait Risque d'incendie et de choc électrique.

Faire le ménage



Avant de nettoyer ce produit, vous devez d'abord retirer le Débranchez le cordon d'alimentation de la prise de courant, sinon cela pourrait provoquer un incendie Risque de catastrophe et de choc électrique.

Interface



Seuls les appareils spécifiés peuvent être connectés à l'interface de ce produit. équipements et appareils. La connexion d'équipements ou de dispositifs involontaires peut provoquer peut provoquer des risques d'incendie et de choc électrique.

Sélection de l'emplacement



Évitez de placer ce produit aux endroits suivants. Non Il existe un risque d'incendie et de choc électrique. Endroits à haute température ou poussières. Cuisine ou autres endroits avec des fumées. Endroits exposés à la lumière directe du soleil ou à tout autre Où ce produit génère des températures élevées.

Volume



Ne jouez jamais de musique à volume élevé pendant de longues périodes. utiliser Soyez particulièrement prudent lorsque vous utilisez des écouteurs, car un volume excessif peut endommager votre

Objets lourds



Ne placez jamais d'objets lourds sur ce produit. Sinon, le produit Le dessus du produit est trop lourd, ce qui fait basculer le produit ou le laisse tomber sur des objets. Si le produit tombe, il existe un risque de blessure.

Assemblage correct du stand



Un assemblage incorrect du support peut le faire basculer, ce qui entraînerait le produit à Si le produit tombe, il existe un risque de blessure. Il faut donc Il doit être assemblé conformément aux instructions du manuel qui l'accompagne pour garantir que Ce produit est garanti correctement installé dans son support.

Remplacement du fusible



Si le fusible saute, il peut y avoir un court-circuit à l'intérieur du produit. phénomène de circuit, ou instabilité de tension, il est nécessaire de consulter un professionnel Identifiez-le et remplacez-le, sinon il y a un risque d'incendie et de choc électrique.

